

GENERAL PURPOSE DRIVES

ACS580-01 drives, frames R1 to R5

Quick installation and start-up guide



R1-
R4

R5



EN

List of related manuals in English

Drive manuals and guides

Code (English)

<i>ACS580 standard control program firmware manual</i>	3AXD50000016097
<i>ACS580-01 (0.75 to 250 kW, 1.0 to 350 hp) hardware manual</i>	3AXD50000044794
<i>ACS580-01 frames R1 to R5 quick installation and start-up guide</i>	3AXD50000044838
<i>ACS580-01 frames R6 to R9 quick installation and start-up guide</i>	3AXD50000009286
<i>ACx-AP-X assistant control panels user's manual</i>	3AUA0000085685

Option manuals and guides

<i>ACS580-01, ACH580-01 and ACQ580-01 installation guide for UK gland plate (option +H358)</i>	3AXD50000034735
<i>CPTC-02 ATEX-certified thermistor protection module, Ex II (2) GD (+L537+Q971) user's manual</i>	3AXD50000030058
<i>CDPI-01 communication adapter module user's manual</i>	3AXD50000009929
<i>DPMP-01 mounting platform for control panels</i>	3AUA0000100140
<i>DPMP-02/03 mounting platform for control panels</i>	3AUA0000136205
<i>FCAN-01 CANopen adapter module user's manual</i>	3AFE68615500
<i>FCNA-01 ControlNet adapter module user's manual</i>	3AUA0000141650
<i>FDNA-01 DeviceNet™ adapter module user's manual</i>	3AFE68573360
<i>FECA-01 EtherCAT adapter module user's manual</i>	3AUA0000068940
<i>FEIP-21 Ethernet/IP adapter module user's manual</i>	3AXD50000158621
<i>FENA-01/-11/-21 Ethernet adapter module user's manual</i>	3AUA0000093568
<i>FEPL-02 Ethernet POWERLINK adapter module user's manual</i>	3AUA0000123527
<i>FMBT-21 Modbus/TCP adapter module user's manual</i>	3AXD50000158607
<i>FPBA-01 PROFIBUS DP adapter module user's manual</i>	3AFE68573271
<i>FPNO-21 PROFINET adapter module user's manual</i>	3AXD50000158614
<i>FSCA-01 RS-485 adapter module user's manual</i>	3AUA0000109533
<i>Main switch and EMC C1 filter options (+F278, +F316, +E223) installation supplement for ACS580-01, ACH580-01 and ACH580-01 frames R1 to R5</i>	3AXD50000155132
<i>UL Type 12 hood quick installation guide for ACS580-01, ACH580-01 and ACQ580-01 frames R1 to R9</i>	3AXD50000196067

Note: For flange mounting kit manuals, see section Related documents in the drive *hardware manual*.

You can find manuals and other product documents in PDF format on the Internet.

See section [Document library on the Internet](#) on the inside of the back cover. For manuals not available in the Document library, contact your local ABB representative.

The QR code below opens an online listing of the manuals applicable to this product.



[ACS580-01 manuals](#)

Table of contents

List of related manuals in English

Frames R1 to R4

Ratings and fuses

IEC ratings at UN = 230 V, 400 V and 480 V	9
UN = 230 V	9
UN = 400 V	10
UN = 480 V	10
gG fuses	11
uR or aR fuses	12

EN – R1...R4 Quick installation guide

Obey the safety instructions	15
Check if capacitors need to be reformed	15
Select the power cables	16
Ensure the cooling	16
Protect the drive and input power cable	16
Install the drive on the wall	16
Check the insulation of the power cables and the motor	16
Switch off the power and open the cover	17
Install the cable box	17
Attach the warning sticker	17
Check the compatibility with IT (ungrounded), corner-grounded delta, midpoint-grounded delta, and TT systems	17
EMC filter	17
Ground-to-phase varistor	18
Connect the power cables	19
Connect the control cables	20
Default I/O connections	21
Install optional modules, if any	22
Reinstall cover	22

Compliance with the European Machinery Directive 2006/42/EC

Declaration of conformity	23
---------------------------------	----

Frames R5

Ratings and fuses

IEC ratings at UN = 230 V, 400 V and 480 V	27
UN = 230 V	27
UN = 400 V	27

4 Table of contents

UN = 480 V	28
gG fuses	29
uR or aR fuses	29

EN – R5 Quick installation guide

Obey the safety instructions	31
Check if capacitors need to be reformed	31
Select the power cables	32
Ensure the cooling	32
Protect the drive and input power cable	32
Install the drive on the wall	32
Check the insulation of the power cables and the motor	32
Switch off the power and open the cover	33
Check the compatibility with IT (ungrounded), corner-grounded delta, midpoint-grounded delta, and TT systems	33
EMC filter	33
Ground-to-phase varistor	33
Connect the power cables	35
Connect the control cables	36
Default I/O connections	37
Install optional modules, if any	38
Reinstall cover	38

Compliance with the European Machinery Directive 2006/42/EC

Declaration of conformity	40
---------------------------------	----

Quick start-up guide

EN – Quick start-up guide

Before you start	43
Start-up with the First start assistant on an assistant control panel	43

Frames R1 to R4 and R5 installation figures

R1...R4 Figures A

B1	53
B2	53
B3	53
C1	53
C2	53
D	54
E1	54
E2	54
F	54
G1	54
G2	54

R1...R4 Figures H

I 55
 I2 55
 J 56

R5 Figures A

B 57
 C 58
 D 58
 E 58

R5 Figures F

G 59
 H 59
 I 60

Further information

Product and service inquiries 61
 Product training 61
 Providing feedback on ABB Drives manuals 61
 Document library on the Internet 61

GENERAL PURPOSE DRIVES

ACS580-01 drives

Quick installation guide Frames R1 to R4

R1-
R4



English 15

EN

Ratings and fuses

IEC ratings at $U_N = 230 \text{ V}$, 400 V and 480 V

■ $U_N = 230 \text{ V}$

Type ACS580 -01-	Input rating	Output ratings							Max. losses	Frame size
		Max. current	Nominal use		Light-duty use		Heavy-duty use			
			I_{\max}	I_N	P_N	I_{Ld}	P_{Ld}	I_{Hd}		
A	A	A	kW	A	kW	A	kW	W		
3-phase $U_N = 230 \text{ V}$										
04A7-2	4.7	6.3	4.7	0.75	4.6	0.75	3.5	0.55	45	R1
06A7-2	6.7	8.9	6.7	1.1	6.6	1.1	4.6	0.75	55	R1
07A6-2	7.6	11.9	7.6	1.5	7.5	1.5	6.6	1.1	66	R1
12A0-2	12.0	19.1	12.0	3.0	11.8	3.0	7.5	2.2	106	R1
018A-2	16.9	22.0	16.9	4.0	16.7	4.0	10.6	3.0	133	R1
025A-2	24.5	32.7	24.5	5.5	24.2	5.5	16.7	4.0	174	R2
032A-2	31.2	43.6	31.2	7.5	30.8	7.5	24.2	5.5	228	R2
047A-2	46.7	62.4	46.7	11	46.2	11	30.8	7.5	322	R3
060A-2	60	83.2	60	15	59.4	15	46.2	11	430	R3

3AXD0000586715.xls L

Type ACS580-01-	Input ratings		Output ratings		Frame size	
	I_1		I_N	P_N		
	A		A ¹⁾	kW		
1-phase $U_N = 230 \text{ V}$						
04A7-2		3.3		2.2	0.37	R1
06A7-2		4.6		3.2	0.5	R1
07A6-2		6.3		4.2	0.75	R1
12A0-2		8.9		6.0	1.1	R1
018A-2		11.8		6.8	1.5	R1
025A-2		17.3		9.6	2.2	R2
032A-2		30.4		15.2	4.0	R2
047A-2		42		22	5.5	R3
060A-2		55		28	7.5	R3

3AXD0000586715.xls L

¹⁾ Continuous current, no overloadability

R1-
R4

■ $U_N = 400 \text{ V}$

R1-
R4

Type ACS580 -01-	Input rating	Output ratings							Max. losses	Frame size	
		Max. current		Nominal use		Light-duty use		Heavy-duty use			
		I_1	I_{max}	I_N	P_N	I_{Ld}	P_{Ld}	I_{Hd}			P_{Hd}
		A	A	A	kW	A	kW	A			kW
3-phase $U_N = 400 \text{ V}$											
02A7-4	2.6	3.2	2.6	0.75	2.5	0.75	1.8	0.55	69	R1	
03A4-4	3.3	4.7	3.3	1.1	3.1	1.1	2.6	0.75	78	R1	
04A1-4	4.0	5.9	4.0	1.5	3.8	1.5	3.3	1.1	87	R1	
05A7-4	5.6	7.2	5.6	2.2	5.3	2.2	4.0	1.5	113	R1	
07A3-4	7.2	10.1	7.2	3.0	6.8	3.0	5.6	2.2	127	R1	
09A5-4	9.4	13.0	9.4	4.0	8.9	4.0	7.2	3.0	165	R1	
12A7-4	12.6	15.3	12.6	5.5	12.0	5.5	9.4	4.0	237	R1	
018A-4	17.0	22.7	17.0	7.5	16.2	7.5	12.6	5.5	265	R2	
026A-4	25.0	30.6	25.0	11.0	23.8	11.0	17.0	7.5	418	R2	
033A-4	32.0	44.3	32.0	15.0	30.4	15.0	24.6	11.0	514	R3	
039A-4	38.0	56.9	38.0	18.5	36.1	18.5	31.6	15.0	570	R3	
046A-4	45.0	67.9	45.0	22.0	42.8	22.0	37.7	18.5	709	R3	
062A-4	62	76	62	30	58	30	45	22	967	R4	
073A-4	73	104	73	37	68	37	61	30	1230	R4	

3AXD00000586715.xls L

■ $U_N = 480 \text{ V}$

Type ACS580 -01-	Input rating	Output ratings					Max. losses	Air flow	Frame size	
		Max. current		Nominal use		Heavy-duty use				
		I_1	I_{max}	I_{Ld}	P_{Ld}	I_{Hd}				P_{Hd}
		A	A	A	hp	A				hp
3-phase $U_N = 480 \text{ V}$										
02A7-4	2.1	2.9	2.1	1.0	1.6	0.75	45	43	R1	
03A4-4	3.0	3.8	3.0	1.5	2.1	1.0	55	43	R1	
04A1-4	3.4	5.4	3.5	2.0	3.0	1.5	66	43	R1	
05A7-4	4.8	6.1	4.8	3.0	3.4	2.0	84	43	R1	
07A3-4	6.0	7.2	6.0	3.0	4.0	3.0	106	43	R1	
09A5-4	7.6	8.6	7.6	5.0	4.8	3.0	133	43	R1	
12A7-4	11.0	13.7	12.0	7.5	7.6	5.0	174	43	R1	
018A-4	14.0	19.8	14.0	10.0	11.0	7.5	228	101	R2	
026A-4	21.0	25.2	23.0	1.0	14.0	10.0	322	101	R2	
033A-4	27.0	37.8	27.0	20.0	21.0	15.0	430	179	R3	
039A-4	34.0	48.6	34.0	25.0	27.0	20.0	525	179	R3	
046A-4	40.0	61.2	44.0	30.0	34.0	25.0	619	179	R3	
062A-4	52	76	52	40	40	30.0	835	134	R4	
073A-4	65	104	65	50	52	40.0	1024	134	R4	

3AXD00000586715.xls L

gG fuses

Type ACS580-01-	Min. short-circuit current ¹⁾	Input current	gG (IEC 60269)				
			Nominal current	I^2t	Voltage rating	ABB type	IEC 60269 size
			A	A ² s	V		
3-phase $U_N = 230$ V							
04A7-2	200	4.7	25.0	2500.0	500	OFAF000H25	000
06A7-2	200	6.7	25.0	2500.0	500	OFAF000H25	000
07A6-2	200	7.6	25.0	2500.0	500	OFAF000H25	000
012A-2	200	12.0	25.0	2500.0	500	OFAF000H25	000
018A-2	200	16.9	25.0	2500.0	500	OFAF000H25	000
025A-2	320	24.5	40.0	7700.0	500	OFAF000H40	000
032A-2	320	31.2	40.0	7700.0	500	OFAF000H40	000
047A-2	500	46.7	63.0	20100.0	500	OFAF000H63	000
060A-2	500	60.0	63.0	20100.0	500	OFAF000H63	000
3-phase $U_N = 400$ or 480 V							
02A7-4	32	2.6	4	55	500	OFAF000H4	000
03A4-4	48	3.3	6	110	500	OFAF000H6	000
04A1-4	48	4.0	6	110	500	OFAF000H6	000
05A7-4	80	5.6	10	360	500	OFAF000H10	000
07A3-4	80	7.2	10	360	500	OFAF000H10	000
09A5-4	128	9.4	16	740	500	OFAF000H16	000
12A7-4	128	12.6	16	740	500	OFAF000H16	000
018A-4	200	17.0	25	2500	500	OFAF000H25	000
026A-4	256	25.0	32	4000	500	OFAF000H32	000
033A-4	320	32.0	40	7700	500	OFAF000H40	000
039A-4	400	38.0	50	16000	500	OFAF000H50	000
046A-4	500	45.0	63	20100	500	OFAF000H63	000
062A-4	800	62	80	37500	500	OFAF000H80	000
073A-4	1000	73	100	65000	500	OFAF000H100	000

3AXD00000586715.xls L

¹⁾ Minimum short-circuit current of the installation

uR or aR fuses

Type ACS580 -01-	Min. short- circuit current ¹⁾	Input current	uR or aR (DIN 43620 blade style)				
			Nominal current	I^2t	Voltage rating	Bussmann type	IEC 60269 size
A		A	A	A ² s	V		
3-phase $U_N = 230$ V							
04A7-2	120.0	4.7	40.0	460.0	690	170M1563	000
06A7-2	120.0	6.7	40.0	460.0	690	170M1563	000
07A6-2	120.0	7.6	40.0	460.0	690	170M1563	000
012A-2	120.0	12.0	40.0	460.0	690	170M1563	000
018A-2	120.0	16.9	40.0	460.0	690	170M1563	000
025A-2	170.0	24.5	63.0	1450.0	690	170M1565	000
032A-2	170.0	31.2	63.0	1450.0	690	170M1565	000
047A-2	280.0	46.7	80.0	2550.0	690	170M1566	000
060A-2	280.0	60.0	80.0	2550.0	690	170M1566	000
089A-2	700.0	89.0	200.0	15000.0	690	170M3815	1
115A-2	700.0	115.0	200.0	15000.0	690	170M3815	1
144A-2	1000	144.0	315	46500	690	170M3817	1
171A-2	1280	171.0	450	105000	690	170M5809	2
213A-2	1450	213.0	500	155000	690	170M5810	2
276A-2	2050	276.0	630	220000	690	170M6810	3
3-phase $U_N = 400$ or 480 V							
02A7-4	65	2.6	25	130	690	170M1561	000
03A4-4	65	3.3	25	130	690	170M1561	000
04A1-4	65	4.0	25	130	690	170M1561	000
05A7-4	65	5.6	25	130	690	170M1561	000
07A3-4	65	7.2	25	130	690	170M1561	000
09A5-4	65	9.4	25	130	690	170M1561	000
12A7-4	65	12.6	25	130	690	170M1561	000
018A-4	120	17.0	40	460	690	170M1563	000
026A-4	120	25.0	40	460	690	170M1563	000
033A-4	170	32.0	63	1450	690	170M1565	000
039A-4	170	38.0	63	1450	690	170M1565	000
046A-4	280	45.0	80	2550	690	170M1566	000
062A-4	380	62	100	4650	690	170M1567	000
073A-4	480	73	125	8500	690	170M1568	000
088A-4	700	88	160	16000	690	170M1569	000
106A-4	1280	106	315	46500	690	170M3817	1
145A-4	1280	145	315	46500	690	170M3817	1
169A-4	1800	169	450	105000	690	170M5809	1
206A-4	2210	206	500	145000	690	170M5810	1
246A-4	3010	246	630	275000	690	170M5812	2
293A-4	4000	293	800	490000	690	170M6812D	2
363A-4	5550	363	1000	985000	690	170M6814D	2
430A-4	7800	430	1250	2150000	690	170M8554D	2

3AXD00000586715.xls L

1) Minimum short-circuit current of the installation

Type ACS580 -01-	Min. short- circuit current ¹⁾	Input current	uR or aR (DIN 43653 bolted tags)				
			Nominal current	I^2t	Voltage rating	Bussmann type	IEC 60269 size
			A	A ² s	V		
3-phase $U_N = 400$ or 480 V							
02A7-4	65	2.6	25	130	690	170M1311	000
03A4-4	65	3.3	25	130	690	170M1311	000
04A1-4	65	4.0	25	130	690	170M1311	000
05A7-4	65	5.6	25	130	690	170M1311	000
07A3-4	65	7.2	25	130	690	170M1311	000
09A5-4	65	9.4	25	130	690	170M1311	000
12A7-4	65	12.6	25	130	690	170M1311	000
018A-4	120	17.0	40	460	690	170M1313	000
026A-4	120	25.0	40	460	690	170M1313	000
033A-4	170	32.0	63	1450	690	170M1315	000
039A-4	170	38.0	63	1450	690	170M1315	000
046A-4	280	45.0	80	2550	690	170M1316	000
062A-4	380	62	100	4650	690	170M1417	000
073A-4	480	73	125	8500	690	170M1318	000
088A-4	700	88	160	16000	690	170M1319	000
106A-4	700	106	200	15000	690	170M3015	1
145A-4	1000	145	250	28500	690	170M3016	1
169A-4	1280	169	315	46500	690	170M3017	1
206A-4	1520	206	350	68500	690	170M3018	1
246A-4	2050	246	450	105000	690	170M5009	2
293A-4	2200	293	500	145000	690	170M5010	2
363A-4	3100	363	630	275000	690	170M5012	2
430A-4	3600	430	700	405000	690	170M5013	2

3AXD00000586715.xls L

¹⁾ Minimum short-circuit current of the installation

R1-
R4

R1-
R4



EN – R1...R4 Quick installation guide

This guide briefly describes how to install the drive for IEC use. For complete information on installation, see *ACS580-01 (0.75 to 250 kW, 1.0 to 350 hp) hardware manual* (3AXD5000044794 [English]). For start-up instructions, see chapter [EN – Quick start-up guide](#) on page 43.

R1-
R4

To read a manual, go to www.abb.com/drives/documents and search for the document number.

Obey the safety instructions



WARNING! Obey these instructions. If you ignore them, injury or death, or damage to the equipment can occur:

- If you are not a qualified electrical professional, do not do electrical installation work.
- Do not work on the drive, motor cable or motor when main power is applied. If the drive is already connected to the input power, wait for 5 minutes after disconnecting the input power.
- Do not work on the control cables when power is applied to the drive or to the external control circuits.
- Make sure that debris from drilling, cutting and grinding does not enter the drive when installing.
- Make sure that the floor below the drive and the wall where the drive is installed are non-flammable.

EN

Check if capacitors need to be reformed

The capacitors must be reformed if the drive has not been powered (either in storage or unused) for a year or more.

You can determine the manufacturing time from the serial number, which you find on the type designation label attached to the drive. The serial number is of format MYYWWRXXXX. YY and WW tell the manufacturing year and week as follows:

YY: 17, 18, 19, ... for 2017, 2018, 2019, ...

WW: 01, 02, 03, ... for week 1, week 2, week 3, ...

For information on reforming the capacitors, see *Converter module capacitor reforming instructions* (3BFE64059629 [English]), available on the Internet at www.abb.com/drives/documents.

Select the power cables

Size the power cables according to local regulations to carry the nominal current given on the type designation label of your drive.

R1-
R4

Ensure the cooling

See table *IEC ratings at UN = 230 V, 400 V and 480 V* on page 9 for the losses. The allowed operating temperature range of the drive is -15 to +50 °C (+5 to +122 °F). No condensation or frost is allowed. For more information on the ambient temperature and derating, see chapter *Technical data* in *ACS580-01 (0.75 to 250 kW, 1.0 to 350 hp) hardware manual* (3AXD50000044794 [English]).

Protect the drive and input power cable

EN

See tables *gG fuses* (on page 11) and *uR or aR fuses* (on page 12).

If you use gG fuses, make sure that the operating time of the fuse is below 0.5 seconds. Follow the local regulations.

Install the drive on the wall

See figure *R1...R4 Figures A* on page 53.

Check the insulation of the power cables and the motor

Check the insulation of the input cable according to local regulations before connecting it to the drive.

See figure *B1* on page 53.

1. Check the insulation of the motor cable and motor when the cable is disconnected from the drive. Measure the insulation resistance between each phase conductor and then between each phase conductor and the Protective Earth conductor using a measuring voltage of 1000 V DC. The insulation resistance of an ABB motor must exceed 100 Mohm (reference value at 25 °C or 77 °F). For the insulation resistance of other motors, see the manufacturer's instructions.

Note: Moisture inside the motor casing will reduce the insulation resistance. If moisture is suspected, dry the motor and repeat the measurement.

Switch off the power and open the cover

See figure [B1](#) on page [53](#).

2. Switch off the power from the drive.
3. Remove the front cover: Loosen the retaining screw, if any, with a screwdriver (3a) and lift the cover from the bottom outwards (3b) and then up (3c).

R1-
R4

Install the cable box

Only for frames IP21, R1...R2.

See figures [B1](#) on page [53](#).

4. IP21, R1...R2: Remove the screw (4a) and lift the cover off (4b) from the separate cable box.
5. IP21, R1...R2: Attach the cable box cover to the front cover.
6. IP21, R1...R2: Install the cable box to the frame. Position the cable box (6a) and tighten the screws (6b).

EN

Attach the warning sticker

See figure [B2](#) on page [53](#).

7. Attach the residual voltage warning sticker in the local language.

Check the compatibility with IT (ungrounded), corner-grounded delta, midpoint-grounded delta, and TT systems

■ EMC filter

A drive with the internal EMC filter connected can be installed to a symmetrically grounded TN-S system. If you install the drive to another system, you may need to disconnect the EMC filter. See section *Checking the compatibility with IT (ungrounded), corner-grounded delta, midpoint-grounded delta, and TT systems* (for IEC) in ACS580-01 (0.75 to 250 kW, 1.0 to 350 hp) hardware manual (3AXD50000044794 [English]).



WARNING! Do not install a drive with the EMC filter connected to a system that the filter is not suitable for. This can cause danger, or damage the drive.

Note: When the internal EMC filter is disconnected, the EMC compatibility of the drive is considerably reduced. See section *EMC compatibility and motor cable length* in chapter *Technical data* in ACS580-01 (0.75 to 250 kW, 1.0 to 350 hp) hardware manual (3AXD50000044794 [English]).

■ Ground-to-phase varistor

A drive with the ground-to-phase varistor connected can be installed to a symmetrically grounded TN-S system. If you install the drive to another system, you may need to disconnect the varistor. See section *Checking the compatibility with IT (ungrounded), corner-grounded delta, midpoint-grounded delta, and TT systems* (for IEC) in ACS580-01 (0.75 to 250 kW, 1.0 to 350 hp) hardware manual (3AXD50000044794 [English]).

R1-
R4



WARNING! Do not install a drive with the ground-to-phase varistor connected to a system that the varistor is not suitable for. If you do, the varistor circuit can be damaged.

EN

Connect the power cables

See figures [C1](#) (page [53](#)), [C2](#), [D](#), [E1](#), [E2](#), [F](#), [G1](#), [G2](#) and [R1...R4 Figures H](#) (page [55](#)).

1. Remove the rubber grommets from the cable entry.

Use symmetrical shielded cable for motor cabling. If the cable shield is the sole PE conductor for drive or motor, make sure that it has sufficient conductivity for the PE.

2. Cut an adequate hole into the rubber grommet. Slide the grommet onto the cable.
3. Prepare the ends of the motor cable as illustrated in figures 3a and 3b (two different motor cable types are shown). In frames R1 and R2 there are markings on the drive frame near the power cable terminals helping you to strip the wires to the correct length of 8 mm. **Note:** The bare shield will be grounded 360 degrees. Mark the pigtail made from the shield as a PE conductor with yellow-and-green color.
4. Slide the cable through the hole in the cable entry, and attach the grommet to the hole.
5. Connect the motor cable:
 - Ground the shield 360 degrees by tightening the clamp of the power cable grounding shelf onto the stripped part of the cable (5a).
 - Connect the twisted shield of the cable to the grounding terminal (5b).
 - Connect the phase conductors of the cable to the T1/U, T2/V and T3/W terminals (5c). Tighten the screws to the torque given in the figure.
6. Repeat steps [2...4](#) for the input power cable.
7. Connect the input power cable. Connect the additional PE conductor of the cable (7c). Tighten the screws to the torque given in the figure.
8. [R1...R2, R4](#): Install the grounding shelf.
9. Repeat steps [2...4](#) for the brake resistor cable (if used). Cut off extra phase conductors (if any).
10. Connect the resistor cable (if used). Tighten the screws to the torque given in the figure.
11. Put the unused rubber grommets to the holes in the cable entry.
12. Secure the cables outside the unit mechanically.
13. Ground the motor cable shield at the motor end. For minimum radio frequency interference, ground the motor cable shield 360 degrees at the cable entry of the motor terminal box.

R1-
R4

EN

Connect the control cables

See figures *1* and *12* on page 55. It shows an example with one analog signal cable and one digital signal cable. Make the connections according to the macro in use. The default connections of the ABB standard macro are shown in section *Default I/O connections* on page 21.

R1-
R4

1. Remove the front cover, if not already removed. See section *Switch off the power and open the cover* on page 17.


Example of connecting an analog signal cable:

2. Cut an adequate hole into the rubber grommet and slide the grommet onto the cable. Slide the cable through a hole in the cable entry and attach the grommet to the hole.
3. Ground the outer shield of the cable 360 degrees under the grounding clamp. Keep the cable unstripped as close to the terminals of the control board as possible. Ground also the pair-cable shields and grounding wire at the SCR1 terminal.
4. Route the cable as shown in the figure.
5. Connect the conductors to the appropriate terminals of the control board and tighten to 0.5...0.6 N·m (0.4 lbf·ft).
6. Tie all control cables to the provided cable tie mounts.

EN

Default I/O connections

Default I/O connections of the ABB Standard macro are shown below.

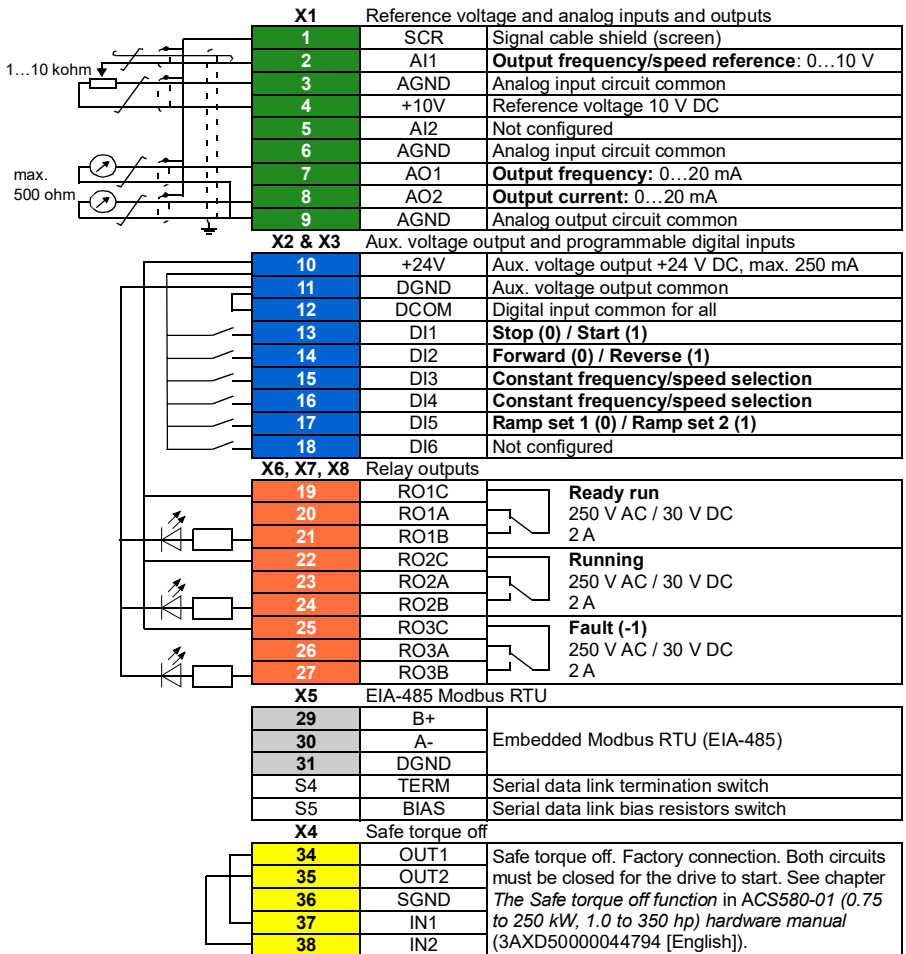

R1-
R4

EN

Total load capacity of the Auxiliary voltage output +24V (X2:10) is 6.0 W (250 mA / 24 V DC).

Wire sizes:

0.2...2.5 mm² (24...14 AWG): Terminals +24V, DGND, DCOM, B+, A-, DGND, Ext. 24V

0.14...1.5 mm² (26...16 AWG): Terminals DI, AI, AO, AGND, RO, STO

Tightening torques: 0.5...0.6 N·m (0.4 lbf·ft)

Install optional modules, if any

See chapter *Electrical installation* in *ACS580-01 (0.75 to 250 kW, 1.0 to 350 hp) hardware manual* (3AXD50000044794 [English]).

R1-
R4

Reinstall cover

See figure [J](#) on page [56](#).

1. Put the tabs on the inside of the cover top in their counterparts on the housing (1a) and then press the cover at the bottom (1b).
2. Tighten the retaining screw with a screwdriver.

EN

For start-up instructions, see chapter [EN – Quick start-up guide](#) on page [43](#).

Compliance with the European Machinery Directive 2006/42/EC

Declaration of conformity



R1-
R4

EU Declaration of Conformity

Machinery Directive 2006/42/EC

We

Manufacturer:	ABB Oy
Address:	Hiomotie 13, 00380 Helsinki, Finland.
Phone:	+358 10 22 11

declare under our sole responsibility that the following product:

Frequency converter(s)

ACS580-01

with regard to the safety function(s)

Safe Torque Off

is/are in conformity with all the relevant safety component requirements of EU Machinery Directive 2006/42/EC, when the listed safety function is used for safety component functionality.

The following harmonized standards have been applied:

EN 61800-5-2:2007	Adjustable speed electrical power drive systems – Part 5-2: Safety requirements - Functional
EN 62061:2005 + AC:2010 + A1:2013 + A2:2015	Safety of machinery – Functional safety of safety-related electrical, electronic and programmable electronic control systems
EN ISO 13849-1:2015	Safety of machinery – Safety-related parts of control systems. Part 1: General requirements
EN ISO 13849-2:2012	Safety of machinery – Safety-related parts of the control systems. Part 2: Validation
EN 60204-1: 2006 + A1:2009 + AC:2010	Safety of machinery – Electrical equipment of machines – Part 1: General requirements

The following other standards have been applied:

IEC 61508:2010, parts 1-2	Functional safety of electrical / electronic / programmable electronic safety-related systems
IEC 61800-5-2:2016	Adjustable speed electrical power drive systems – Part 5-2: Safety requirements - Functional

The product(s) referred in this Declaration of conformity fulfil(s) the relevant provisions of other European Union Directives which are notified in Single EU Declaration of conformity 3AXD10000497690.

Person authorized to compile the technical file

Name and address: Risto Myrntinen, Hiomotie 13, 00380 Helsinki, Finland.

Helsinki 27.03.2019

Manufacturer representative:

Tuomo Tarula
Vice President, ABB Oy

Document number 3AXD10000302783

R1-
R4



GENERAL PURPOSE DRIVES

ACS580-01 drives

Quick installation guide Frames R5

R5

English 31

EN



Ratings and fuses

IEC ratings at $U_N = 230 \text{ V}$, 400 V and 480 V

■ $U_N = 230 \text{ V}$

Type ACS580 -01-	Input rating	Output ratings							Max. losses	Frame size
		Max. current	Nominal use		Light-duty use		Heavy-duty use			
		I_1	I_{max}	I_N	P_N	I_{Ld}	P_{Ld}	I_{Hd}		
	A	A	A	kW	A	kW	A	kW	W	
3-phase $U_N = 230 \text{ V}$										
089A-2	89	135	89	22	88	22	74.8	18.5	619	R5
115A-2	115	158	115	30	114	30	88.0	22.0	835	R5

3AXD00000586715.xls L

Type ACS580-01-	Input ratings		Output ratings		Frame size	
	I_1		I_N	P_N		
	A		A ¹⁾	kW		
1-phase $U_N = 230 \text{ V}$						
089A-2		81		42	11	R5
115A-2		111		54	15	R5

3AXD00000586715.xls L

¹⁾ Continuous current, no overloadability

■ $U_N = 400 \text{ V}$

Type ACS580 -01-	Input rating	Output ratings							Max. losses	Frame size
		Max. current	Nominal use		Light-duty use		Heavy-duty use			
		I_1	I_{max}	I_N	P_N	I_{Ld}	P_{Ld}	I_{Hd}		
	A	A	A	kW	A	kW	A	kW	W	
3-phase $U_N = 400 \text{ V}$										
088A-4	88	122	88	45	83	45	72	37	1316	R5
106A-4	106	148	106	55	100	55	87	45	1589	R5

3AXD00000586715.xls L

R5

■ $U_N = 480 \text{ V}$

Type ACS580 -01-	Input rating	Output ratings				Max. losses	Air flow	Frame size	
		Max. current	Nominal use		Heavy-duty use				
			I_{\max}	I_{Ld}	P_{Ld}				I_{Hd}
A	A	A	hp	A	hp	W	m ³ /h		
R5	3-phase $U_N = 480 \text{ V}$								
088A-4	77	122	77	60	65	50.0	1240	139	R5
106A-4	96	148	96	75	77	60.0	1510	139	R5

3AXD00000586715.xls L

gG fuses

Type ACS580-01-	Min. short-circuit current ¹⁾	Input current	gG (IEC 60269)				
			Nominal current	I^2t	Voltage rating	ABB type	IEC 60269 size
			A	A	A		
3-phase $U_N = 230$ V							
089A-2	1300	89.0	125.0	103000	500	OFAF00H125	00
115A-2	1300	115.0	125.0	103000	500	OFAF00H125	00
3-phase $U_N = 400$ or 480 V							
088A-4	1000	88	100	65000	500	OFAF000H100	000
106A-4	1300	106	125	103000	500	OFAF00H125	00

3AXD00000586715.xls L

1) Minimum short-circuit current of the installation

uR or aR fuses

Type ACS580-01-	Min. short-circuit current ¹⁾	Input current	uR or aR (DIN 43620 blade style)				
			Nominal current	I^2t	Voltage rating	Bussmann type	IEC 60269 size
			A	A	A		
3-phase $U_N = 230$ V							
089A-2	700.0	89.0	200.0	15000.0	690	170M3815	1
115A-2	700.0	115.0	200.0	15000.0	690	170M3815	1
3-phase $U_N = 400$ or 480 V							
088A-4	700	88	160	16000	690	170M1569	000
106A-4	1280	106	315	46500	690	170M3817	1

3AXD00000586715.xls L

1) Minimum short-circuit current of the installation

Type ACS580-01-	Min. short-circuit current ¹⁾	Input current	uR or aR (DIN 43653 bolted tags)				
			Nominal current	I^2t	Voltage rating	Bussmann type	IEC 60269 size
			A	A	A		
3-phase $U_N = 400$ or 480 V							
088A-4	700	88	160	16000	690	170M1319	000
106A-4	700	106	200	15000	690	170M3015	1

3AXD00000586715.xls L

1) Minimum short-circuit current of the installation

R5



EN – R5 Quick installation guide

This guide briefly describes how to install the drive for IEC use. For complete information on installation, see *ACS580-01 (0.75 to 250 kW, 1.0 to 350 hp) hardware manual* (3AXD5000044794 [English]). For start-up instructions, see chapter [EN – Quick start-up guide](#) on page 43.

To read a manual, go to www.abb.com/drives/documents and search for the document number.

R5

Obey the safety instructions



WARNING! Obey these instructions. If you ignore them, injury or death, or damage to the equipment can occur:

- If you are not a qualified electrical professional, do not do electrical installation work.
- Do not work on the drive, motor cable or motor when main power is applied. If the drive is already connected to the input power, wait for 5 minutes after disconnecting the input power.
- Do not work on the control cables when power is applied to the drive or to the external control circuits.
- Make sure that debris from drilling, cutting and grinding does not enter the drive when installing.
- Make sure that the floor below the drive and the wall where the drive is installed are non-flammable.

EN

Check if capacitors need to be reformed

The capacitors must be reformed if the drive has not been powered (either in storage or unused) for a year or more.

You can determine the manufacturing time from the serial number, which you find on the type designation label attached to the drive. The serial number is of format MYYWWRXXXX. YY and WW tell the manufacturing year and week as follows:

YY: 16, 17, 18, ... for 2016, 2017, 2018, ...

WW: 01, 02, 03, ... for week 1, week 2, week 3, ...

For information on reforming the capacitors, see *Converter module capacitor reforming instructions* (3BFE64059629 [English]), available on the Internet at www.abb.com/drives/documents.

Select the power cables

Size the power cables according to local regulations to carry the nominal current given on the type designation label of your drive.

Ensure the cooling

R5

See table *IEC ratings at UN = 230 V, 400 V and 480 V* on page 27 for the losses. The allowed operating temperature range of the drive is -15 to +50 °C (+5 to +122 °F). No condensation or frost is allowed. For more information on the ambient temperature and derating, see chapter *Technical data* in *ACS580-01 (0.75 to 250 kW, 1.0 to 350 hp) hardware manual* (3AXD50000044794 [English]).

Protect the drive and input power cable

EN

See tables *gG fuses* (on page 29) and *uR or aR fuses* (on page 29).

If you use gG fuses, make sure that the operating time of the fuse is below 0.5 seconds. Follow the local regulations.

Install the drive on the wall

See figure *R5 Figures A* on page 57.

Check the insulation of the power cables and the motor

Check the insulation of the input cable according to local regulations before connecting it to the drive.

See figure *B* on page 57.

1. Check the insulation of the motor cable and motor when the cable is disconnected from the drive. Measure the insulation resistance between each phase conductor and then between each phase conductor and the Protective Earth conductor using a measuring voltage of 1000 V DC. The insulation resistance of an ABB motor must exceed 100 Mohm (reference value at 25 °C or 77 °F). For the insulation resistance of other motors, see the manufacturer's instructions.

Note: Moisture inside the motor casing will reduce the insulation resistance. If moisture is suspected, dry the motor and repeat the measurement.

Switch off the power and open the cover

See figure [B](#) on page [57](#).

2. Switch off the power from the drive.
3. [IP21, Remove the module cover](#): Loosen the retaining screws with a screwdriver (3a) and lift the cover from the bottom outwards (3b) and then up (3c).
4. [IP21, Remove the box cover](#): Loosen the retaining screws with a screwdriver (4a) and slide the cover downwards (4b).
5. [IP55, Remove the front cover](#): Loosen the retaining screws with a screwdriver (4a) and lift the cover from the bottom outwards (4b) and then up (4c).

R5

Check the compatibility with IT (ungrounded), corner-grounded delta, midpoint-grounded delta, and TT systems

EN

See figure [C](#) on page [58](#).

■ EMC filter

A drive with the internal EMC filter connected can be installed to a symmetrically grounded TN-S system. If you install the drive to another system, you may need to disconnect the EMC filter. See section *Checking the compatibility with IT (ungrounded), corner-grounded delta, midpoint-grounded delta, and TT systems* (for IEC) in *ACS580-01 (0.75 to 250 kW, 1.0 to 350 hp) hardware manual* (3AXD50000044794 [English]).



WARNING! Do not install a drive with the EMC filter connected to a system that the filter is not suitable for. This can cause danger, or damage the drive.

Note: When the internal EMC filter is disconnected, the EMC compatibility of the drive is considerably reduced. See section *EMC compatibility and motor cable length* in chapter *Technical data* in *ACS580-01 (0.75 to 250 kW, 1.0 to 350 hp) hardware manual* (3AXD50000044794 [English]).

■ Ground-to-phase varistor

A drive with the ground-to-phase varistor connected can be installed to a symmetrically grounded TN-S system. If you install the drive to another system, you may need to disconnect the varistor. See section *Checking the compatibility with IT (ungrounded), corner-grounded delta, midpoint-grounded delta, and TT systems* (for IEC) in *ACS580-01 (0.75 to 250 kW, 1.0 to 350 hp) hardware manual* (3AXD50000044794 [English]).



WARNING! Do not install a drive with the ground-to-phase varistor connected to a system that the varistor is not suitable for. If you do, the varistor circuit can be damaged.

R5

EN

Connect the power cables

See figures [D](#) (page [58](#)), [E](#) and [R5 Figures F](#) (page [59](#)).

1. Attach the residual voltage warning sticker in the local language next to the control board.
2. Remove the shroud on the power cable terminals by releasing the clips with a screwdriver and pulling the shroud out.

Use symmetrical shielded cable for motor cabling. If the cable shield is the sole PE conductor for drive or motor, make sure that it has sufficient conductivity for the PE.

3. Cut an adequate hole into the rubber grommet. Slide the grommet onto the cable.
4. Prepare the ends of the motor cable as illustrated in figures 4a and 4b (two different motor cable types are shown). **Note:** The bare shield will be grounded 360 degrees. Mark the pigtail made from the shield as a PE conductor with yellow-and-green color.
5. Slide the cable through the hole in the cable entry and attach the grommet to the hole.
6. Connect the motor cable:
 - Ground the shield 360 degrees by tightening the clamp of the power cable grounding shelf onto the stripped part of the cable (6a).
 - Connect the twisted shield of the cable to the grounding terminal (6b).
 - Connect the phase conductors of the cable to the T1/U, T2/V and T3/W terminals (6c). Tighten the screws to the torque given in the figure.
7. Repeat steps [3...5](#) for the input power cable.
8. Connect the input power cable. Tighten the screws to the torque given in the figure.
9. Install the cable box plate. Position the plate and tighten the screw.
10. Reinstall the shroud on the power terminals by putting the tabs at the top of the shroud in their counterparts on the drive frame and then pressing the shroud in place.
11. Secure the cables outside the unit mechanically.
12. See figure [G](#) (page [59](#)). Ground the motor cable shield at the motor end. For minimum radio frequency interference, ground the motor cable shield 360 degrees at the cable entry of the motor terminal box.

R5

EN

Connect the control cables

See figure *H* on page 59. It shows an example with one analog signal cable and one digital signal cable. Make the connections according to the macro in use. The default connections of the ABB standard macro are shown in section *Default I/O connections* on page 37.

R5

1. Remove the front cover, if not already removed. See section *Switch off the power and open the cover* on page 33.


Example of connecting an analog signal cable:

EN

2. Cut an adequate hole into the rubber grommet and slide the grommet onto the cable. Slide the cable through a hole in the cable entry and attach the grommet to the hole.
 3. Ground the outer shield of the cable 360 degrees under the grounding clamp. Keep the cable unstripped as close to the terminals of the control board as possible. Ground also the pair-cable shields and grounding wire at the SCR1 terminal.
 4. Route the cable as shown in the figure.
 5. Connect the conductors to the appropriate terminals of the control board and tighten to 0.5...0.6 N·m (0.4 lbf·ft).
 6. Tie all control cables to the provided cable tie mounts.
-

Default I/O connections

Default I/O connections of the ABB Standard macro are shown below.

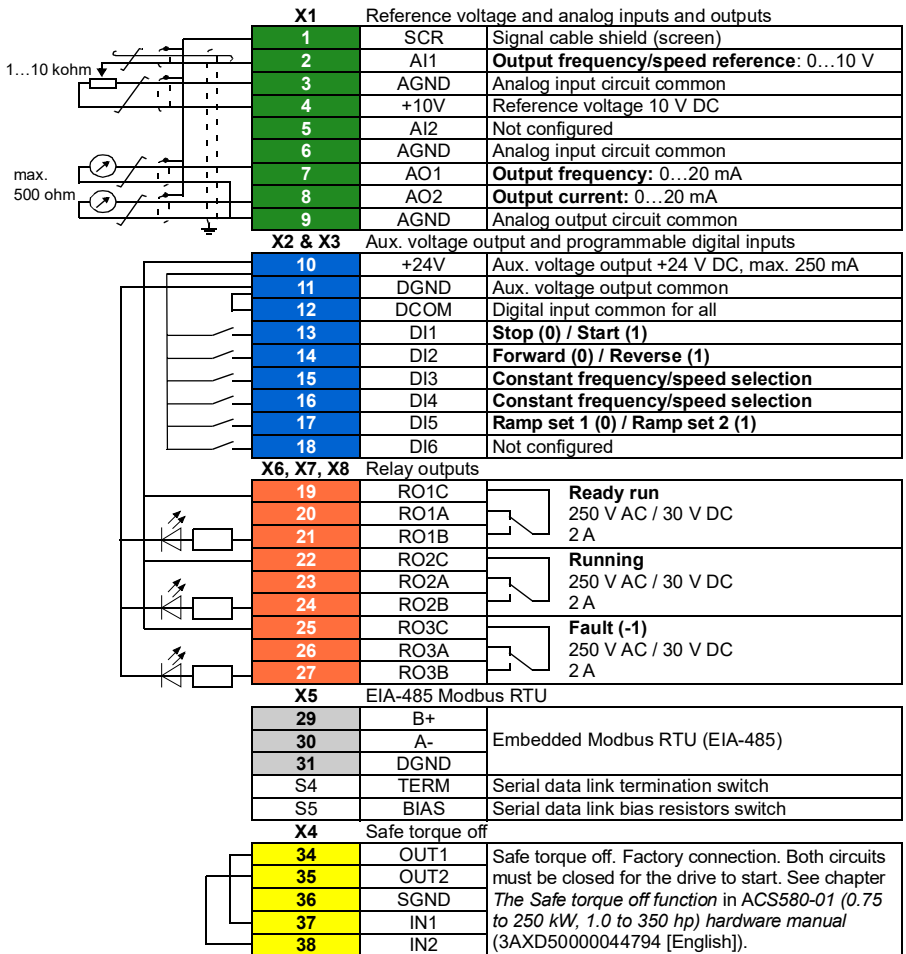

R5

EN

Total load capacity of the Auxiliary voltage output +24V (X2:10) is 6.0 W (250 mA / 24 V DC).

Wire sizes:

0.2...2.5 mm² (24...14 AWG): Terminals +24V, DGND, DCOM, B+, A-, DGND, Ext. 24V

0.14...1.5 mm² (26...16 AWG): Terminals DI, AI, AO, AGND, RO, STO

Tightening torques: 0.5...0.6 N·m (0.4 lbf·ft)

Install optional modules, if any

See chapter *Electrical installation* in *ACS580-01 (0.75 to 250 kW, 1.0 to 350 hp) hardware manual* (3AXD50000044794 [English]).

Reinstall cover

R5 See figure 1 on page 60.


1. IP21, Reinstall the box cover: Slide the cover upwards (1a) and tighten the retaining screws (1b).
2. IP21, Reinstall the module cover: Put the tabs on the inside of the cover top in their counterparts on the housing (2a), press the cover at the bottom (2b) and tighten the retaining screws (2c).
3. IP55, Reinstall the front cover: Put the tabs on the inside of the cover top in their counterparts on the housing (3a), press the cover at the bottom (3a) and tighten the retaining screws (3b).

EN

For start-up instructions, see chapter *EN – Quick start-up guide* on page 43.

Compliance with the European Machinery Directive 2006/42/EC

R5



Declaration of conformity



R5

EU Declaration of Conformity

Machinery Directive 2006/42/EC

We

Manufacturer:	ABB Oy
Address:	Hiomotie 13, 00380 Helsinki, Finland.
Phone:	+358 10 22 11

declare under our sole responsibility that the following product:

Frequency converter(s)

ACS580-01

with regard to the safety function(s)

Safe Torque Off

is/are in conformity with all the relevant safety component requirements of EU Machinery Directive 2006/42/EC, when the listed safety function is used for safety component functionality.

The following harmonized standards have been applied:

EN 61800-5-2:2007	Adjustable speed electrical power drive systems – Part 5-2: Safety requirements - Functional
EN 62061:2005 + AC:2010 + A1:2013 + A2:2015	Safety of machinery – Functional safety of safety-related electrical, electronic and programmable electronic control systems
EN ISO 13849-1:2015	Safety of machinery – Safety-related parts of control systems. Part 1: General requirements
EN ISO 13849-2:2012	Safety of machinery – Safety-related parts of the control systems. Part 2: Validation
EN 60204-1: 2006 + A1:2009 + AC:2010	Safety of machinery – Electrical equipment of machines – Part 1: General requirements

The following other standards have been applied:

IEC 61508:2010, parts 1-2	Functional safety of electrical / electronic / programmable electronic safety-related systems
IEC 61800-5-2:2016	Adjustable speed electrical power drive systems – Part 5-2: Safety requirements - Functional

The product(s) referred in this Declaration of conformity fulfil(s) the relevant provisions of other European Union Directives which are notified in Single EU Declaration of conformity 3AXD10000497690.

Person authorized to compile the technical file

Name and address: Risto Mynttinen, Hiomotie 13, 00380 Helsinki, Finland.

Helsinki 27.03.2019

Manufacturer representative:

Tuomo Tarula
Vice President, ABB Oy

Document number 3AXD10000302783

GENERAL PURPOSE DRIVES

ACS580-01 drives

Quick start-up guide

Frames R1 to R9

R1-
R9



English 43

EN

EN – Quick start-up guide

This guide describes how to start-up the drive using the First start assistant on the assistant control panel. For complete information on start-up, see *ACS580 standard control program firmware manual* (3AXD50000016097 [English]).










Before you start

Ensure that the drive has been installed as described in chapter [EN – R1...R4 Quick installation guide](#) on page 15 (frames R1...R4) or in chapter [EN – R5 Quick installation guide](#) page 31 (frame R5).

R1-
R9

Start-up with the First start assistant on an assistant control panel

EN





















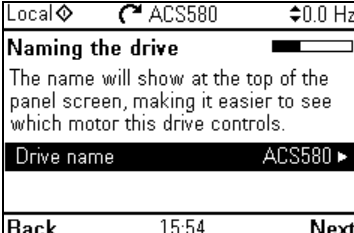


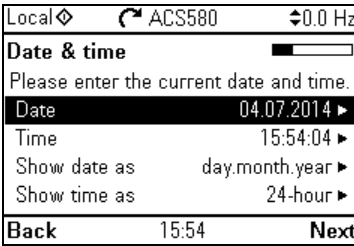Safety	
<input type="checkbox"/>	Make sure that the installation work is complete. Make sure that cover of the drive and the cable box, if included, are on place.
<input type="checkbox"/>	 Check that the starting of the motor does not cause any danger. De-couple the driven machine if there is a risk of damage in case of an incorrect direction of rotation.
Hints on using the assistant control panel	
<p>The two commands at the bottom of the display (Options and Menu in the figure on the right), show the functions of the two softkeys  and  located below the display. The commands assigned to the softkeys vary depending on the context.</p> <p>Use keys , ,  and  to move the cursor and/or change values depending on the active view.</p> <p>Key  shows a context-sensitive help page.</p>	
1 – First start assistant guided settings: Language, date and time, and motor nominal values	
<input type="checkbox"/>	Have the motor name plate data at hand. Power up the drive.

R1-
R9



EN

<input type="checkbox"/>	<p>The First start assistant guides you through the first start-up. The assistant begins automatically. Wait until the control panel enters the view shown on the right. Select the language you want to use by highlighting it (if not already highlighted) and pressing (OK).</p> <p>Note: After you have selected the language, it takes a few minutes for the control panel to wake up.</p>	
<input type="checkbox"/>	<p>Select Start set-up and press (Next).</p>	
<input type="checkbox"/>	<p>Select the localization you want to use and press (Next).</p>	
<input type="checkbox"/>	<p>Change the units shown on the panel if needed.</p> <ul style="list-style-type: none"> Go to the edit view of a selected row by pressing . Scroll the view with and . <p>Go to the next view by pressing (Next).</p>	
<input type="checkbox"/>	<p>To select a value in an edit view:</p> <ul style="list-style-type: none"> Use and to select the value. <p>Press (Save) to accept the new setting, or press (Cancel) to go back to the previous view without making changes.</p>	

<p><input type="checkbox"/> Set the date and time as well as date and time display formats.</p> <ul style="list-style-type: none"> Go to the edit view of a selected row by pressing . Scroll the view with  and . <p>Go to the next view by pressing  (Next).</p>	 <p>Local  ACS580 ± 0.0 Hz</p> <p>Date & time</p> <p>Please enter the current date and time.</p> <p>Date 04.07.2014 </p> <p>Time 15:54:04 </p> <p>Show date as day.month.year </p> <p>Show time as 24-hour </p> <p>Back 15:54 Next</p>
<p><input type="checkbox"/> To change a value in an edit view:</p> <ul style="list-style-type: none"> Use  and  to move the cursor left and right. Use  and  to change the value. Press  (Save) to accept the new setting, or press  (Cancel) to go back to the previous view without making changes. 	 <p>Local  ACS580 ± 0.0 Hz</p> <p>Date</p> <p>Day Month Year</p> <p>04.07.2014</p> <p>Friday</p> <p>Cancel 15:54 Save</p>
<p><input type="checkbox"/> To give the drive a name that will be shown at the top, press .</p> <p>If you do not want to change the default name (ACS580), continue straight to the set-up of the motor nominal values by pressing  (Next).</p> <p>For information on editing text, see ACS580 <i>standard control program firmware manual</i> (3AXD50000016097 [English]).</p>	 <p>Local  ACS580 ± 0.0 Hz</p> <p>Naming the drive</p> <p>The name will show at the top of the panel screen, making it easier to see which motor this drive controls.</p> <p>Drive name ACS580 </p> <p>Back 15:54 Next</p>

R1-R9



EN

Refer to the motor nameplate for the following nominal value settings of the motor. Enter the values exactly as shown on the motor nameplate.

Example of a nameplate of an induction (asynchronous) motor:

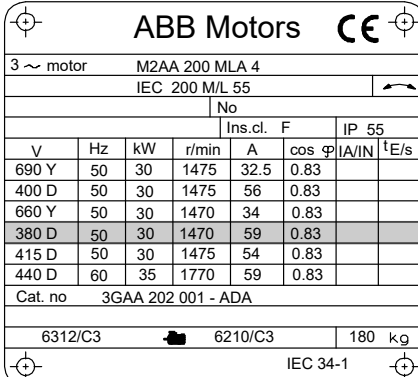


ABB Motors CE

3 ~ motor M2AA 200 MLA 4

IEC 200 M/L 55

No

Ins.cl. F IP 55

v	Hz	kW	r/min	A	cos φ	I _A /I _N	I _E /s
690 Y	50	30	1475	32.5	0.83		
400 D	50	30	1475	56	0.83		
660 Y	50	30	1470	34	0.83		
380 D	50	30	1470	59	0.83		
415 D	50	30	1475	54	0.83		
440 D	60	35	1770	59	0.83		


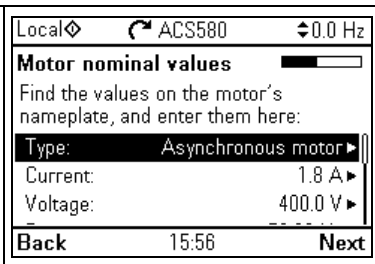

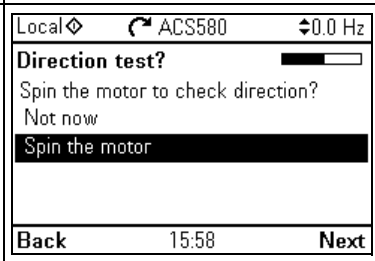

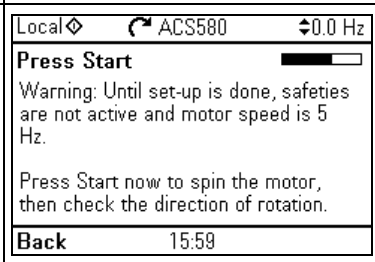






Cat. no 3GAA 202 001 - ADA








6312/C3 6210/C3 180 kg

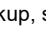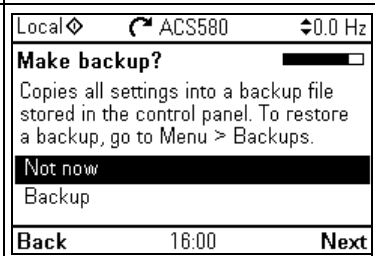IEC 34-1

R1-
R9

EN
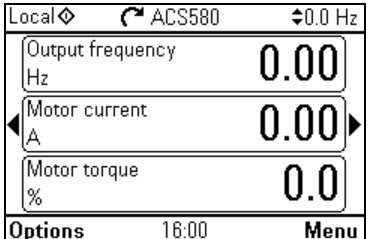
<input type="checkbox"/> Check that the motor data is correct. Values are predefined on the basis of the drive size but you should verify that they correspond to the motor. Start with the motor type. Motor nominal cos Φ and nominal torque are optional. Press  (Next) to continue.	
<input type="checkbox"/> This step is optional, and requires rotating the motor. Do not do this if it could cause any risk, or if the mechanical set-up does not allow it. To do the direction test, select Spin the motor and press  (Next).	
<input type="checkbox"/> Press the Start key  on the panel to start the drive.	
<input type="checkbox"/> Check the direction of the motor. If it is forward, select Yes, motor is spinning forward and press  (Next) to continue. If the direction is not forward, select No, fix direction and press  (Next) to continue.	
<input type="checkbox"/> If you want to make a backup of the settings made so far, select Backup and press  (Next). If you do not want to make a backup, select Not now and press  (Next).	














<p><input type="checkbox"/> The first start is now complete and the drive is ready for use. Press  (Done) to enter the Home view.</p>	 <p>Local  ACS580  0.0 Hz</p> <p>First start complete Drive is ready for use. Start/Stop: DI1 Direction: DI2 Reference (freq): AI1 scaled</p> <p>Back 16:00 Done</p>
<p><input type="checkbox"/> The Home view monitoring the values of the selected signals is shown on the panel.</p>	 <p>Local  ACS580  0.0 Hz</p> <p>Output frequency 0.00 Hz</p> <p>Motor current 0.00 A</p> <p>Motor torque 0.0 %</p> <p>Options 16:00 Menu</p>

R1-
R9


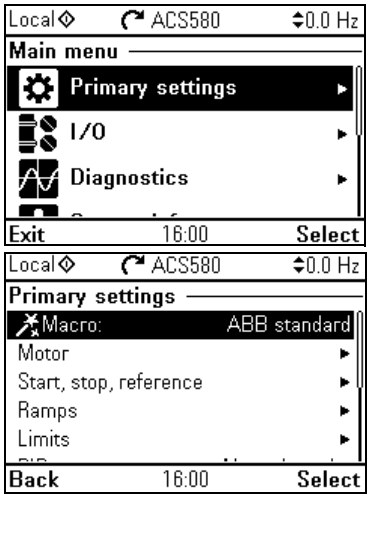


EN



2 – Additional settings in the Primary settings menu



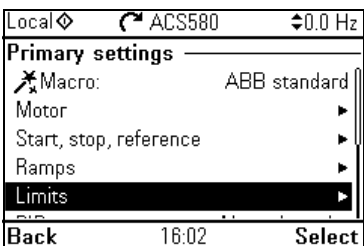





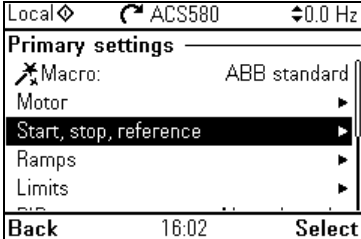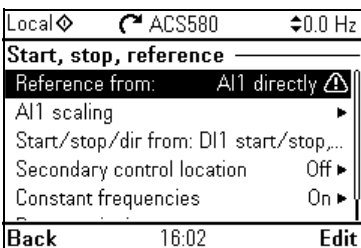



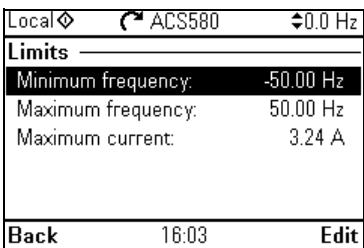

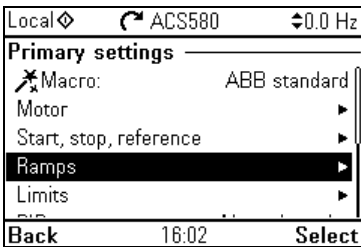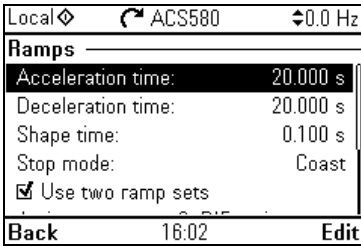
<p><input type="checkbox"/> Make any additional adjustments, for example macro, ramps and limits, starting from the Main menu – press  (Menu) to enter the Main menu.</p> <p>Select Primary settings and press  (Select) (or ).</p> <p>We recommend that you make at least these additional settings:</p> <ul style="list-style-type: none"> • Choose a macro or set start, stop and reference values individually • Ramps • Limits <p>With the Primary settings menu, you can also adjust settings related to the motor, PID, fieldbus, advanced functions and clock, region and display. In addition, the menu contains an item to reset the panel Home view.</p> <p>To get more information on the Primary settings menu items, press  to open the help page.</p>	 <p>Local  ACS580  0.0 Hz</p> <p>Main menu</p> <ul style="list-style-type: none">  Primary settings ▶  I/O ▶  Diagnostics ▶ <p>Exit 16:00 Select</p> <p>Local  ACS580  0.0 Hz</p> <p>Primary settings</p> <ul style="list-style-type: none">  Macro: ABB standard Motor ▶ Start, stop, reference ▶ Ramps ▶ Limits ▶ <p>Back 16:00 Select</p>
--	--

2 – Additional settings: Start, stop and reference values

<div style="background-color: #e0f0ff; padding: 2px; font-weight: bold;">R1-R9</div> <div style="background-color: #e0f0ff; padding: 2px; text-align: center; font-size: 1.2em; margin-top: 5px;">I</div>	<p><input type="checkbox"/> If you do not wish to use a macro, define the settings for start, stop and reference: Select Start, stop, reference and press (Select) (or).</p>	
<div style="background-color: #e0f0ff; padding: 2px; font-weight: bold;">EN</div>	<p><input type="checkbox"/> Adjust the parameters according to your needs. Select a parameter and, depending on the parameter type, press (Edit) or press (Select) (or).</p> <p>When you change the settings, you also change the use of the I/O signals in the drive. Make sure the actual I/O wiring and the use of I/O in the control program match each other. You can check the current I/O use in the I/O menu under the Main menu.</p> <p>After making the adjustments, go back to the Primary settings menu by pressing (Back).</p>	

2 – Additional settings: Ramps (acceleration and deceleration times for the motor)

<div style="background-color: #e0f0ff; padding: 2px; font-weight: bold;">R1-R9</div>	<p><input type="checkbox"/> Select Ramps and press (Select) (or).</p>	
<div style="background-color: #e0f0ff; padding: 2px; font-weight: bold;">EN</div>	<p><input type="checkbox"/> Adjust the parameters according to your needs. Select a parameter and press (Edit).</p> <p>After making the adjustments, go back to the Primary settings menu by pressing (Back).</p>	

2 – Additional settings: Limits	
<input type="checkbox"/> Select Limits and press  (Select) (or ).	 <p>Local  ACS580  0.0 Hz</p> <p>Primary settings</p> <ul style="list-style-type: none">  Macro: ABB standard Motor  Start, stop, reference  Ramps  Limits  <p>Back 16:02 Select</p>
<input type="checkbox"/> Adjust the parameters according to your needs. Select a parameter and press  (Edit). After making the adjustments, go back to the Primary settings menu by pressing  (Back).	 <p>Local  ACS580  0.0 Hz</p> <p>Limits</p> <ul style="list-style-type: none"> Minimum frequency: -50.00 Hz Maximum frequency: 50.00 Hz Maximum current: 3.24 A <p>Back 16:03 Edit</p>

R1-
R9



EN

R1-
R9



EN

GENERAL PURPOSE DRIVES

ACS580-01 drives

Quick installation guide


Frames R1 to R4 and R5 installation figures

R1-
R4


R5




R1...R4 Figures A

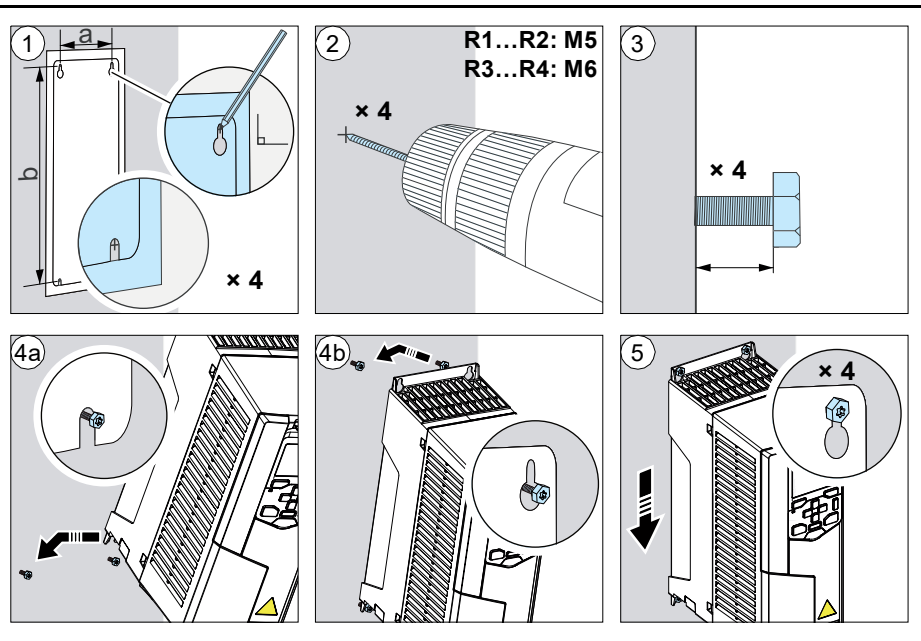


B1

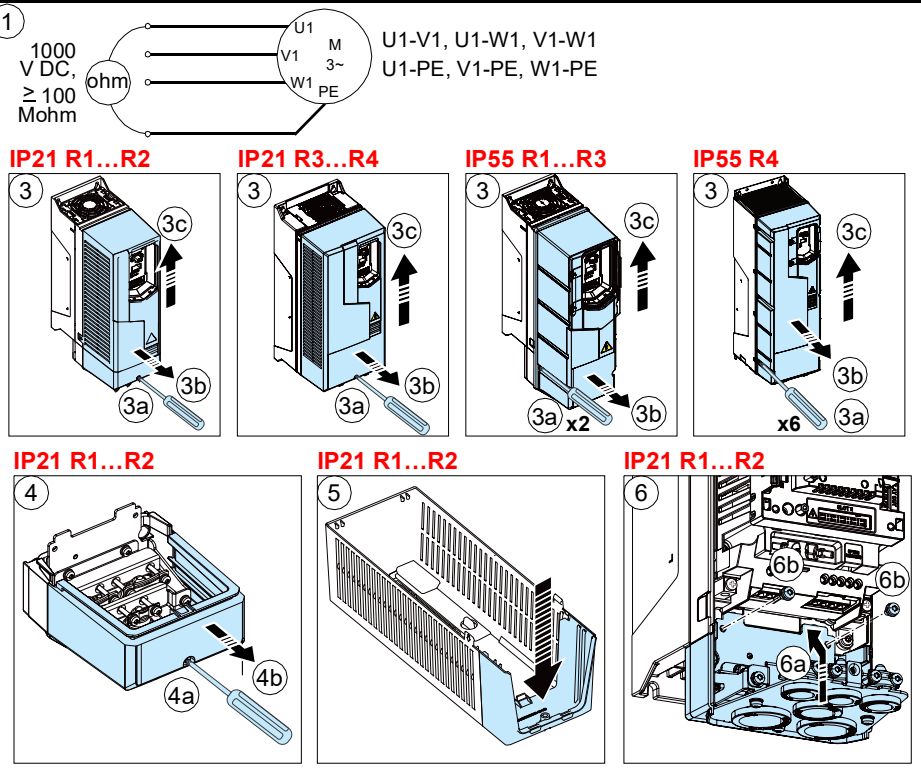


B2

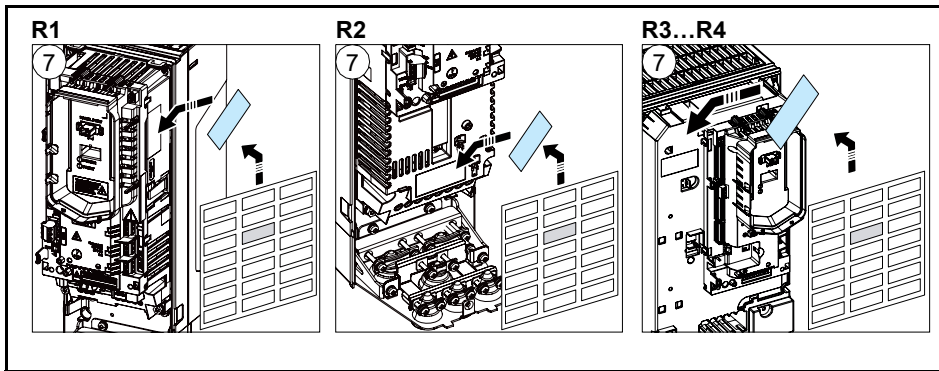


B3

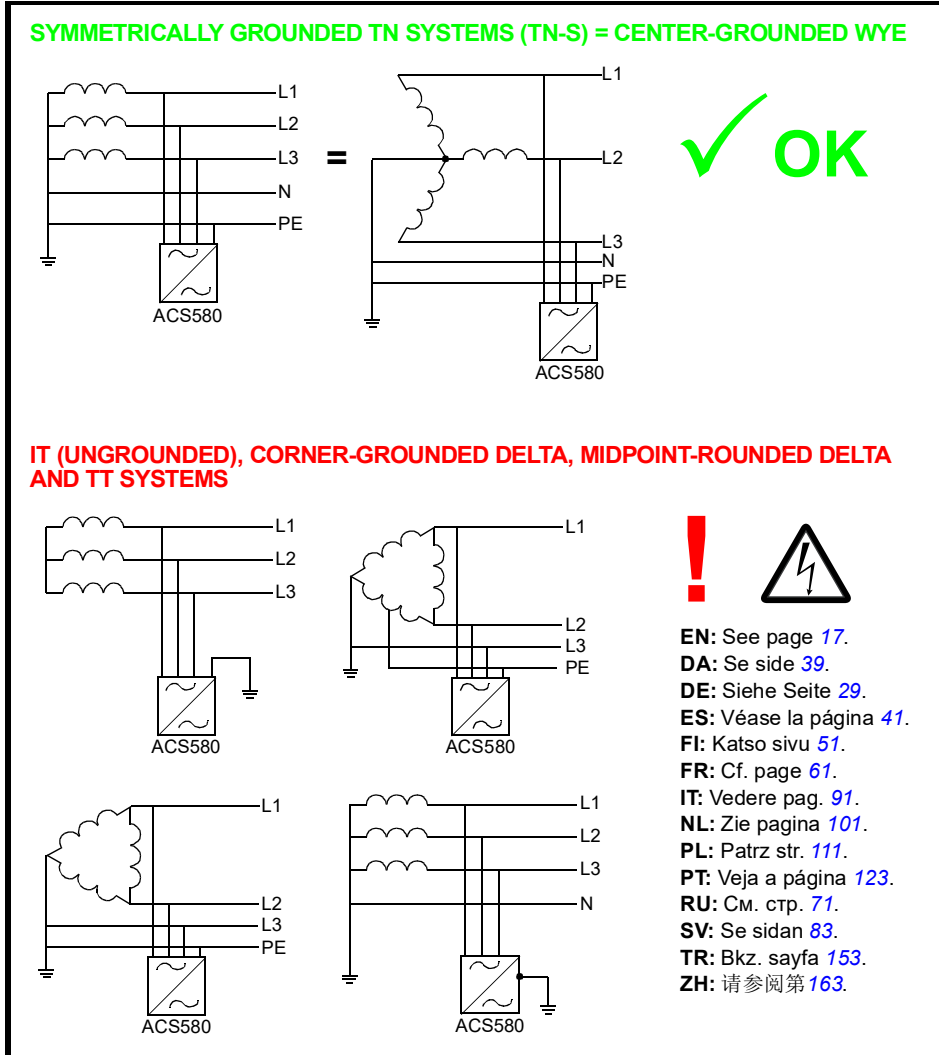

C1

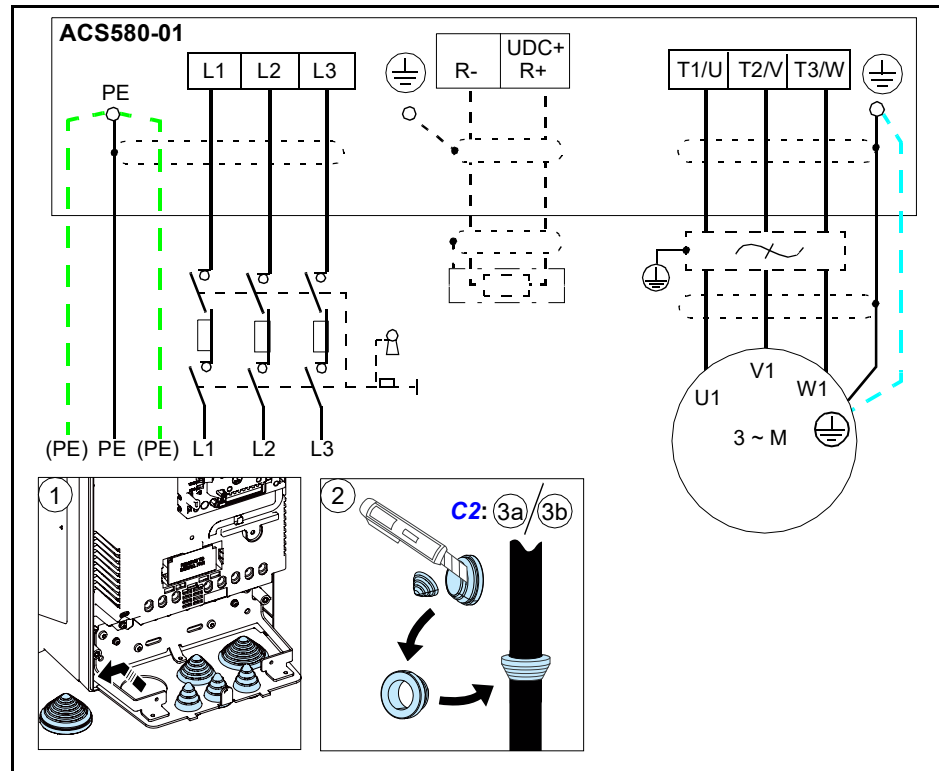

C2

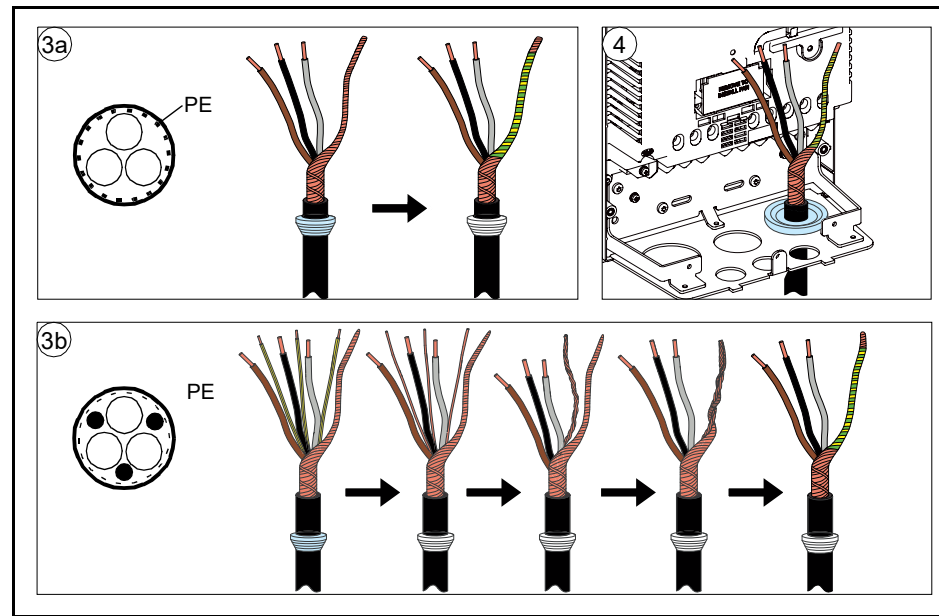

R1...R2

R3

R4

Frame size	R1		R2	
	N·m	lbf·ft	N·m	lbf·ft
T1/U, T2/V, T3/W	1.0	0.7	1.5	1.1
PE, ⊕	1.5	1.1	1.5	1.1
	1.2	0.9	1.2	0.9

Frame size	R3		R4	
	N·m	lbf·ft	N·m	lbf·ft
T1/U, T2/V, T3/W	3.5	2.6	4.0	3.0
PE, ⊕	1.5	1.1	2.9	2.1
	1.2	0.9	1.2	0.9

E1

6a

6b

6c

E2

R1...R2

R3

R4

Frame size	R1		R2	
	N·m	lbf·ft	N·m	lbf·ft
L1, L2, L3	1.0	0.7	1.5	1.1
PE, ⊕	1.5	1.1	1.5	1.1
	1.2	0.9	1.2	0.9

Frame size	R3		R4	
	N·m	lbf·ft	N·m	lbf·ft
L1, L2, L3	3.5	2.6	4.0	3.0
PE, ⊕	1.5	1.1	2.9	2.1
	1.2	0.9	1.2	0.9

F

R1...R2

R4

G1

9





G2


R1...R2

R3


Frame size	R1		R2		R3	
	N·m	lbf·ft	N·m	lbf·ft	N·m	lbf·ft
R-, R+	1.0	0.7	1.5	1.1	3.5	2.6
PE, ⊕	1.5	1.1	1.5	1.1	1.5	1.1
	1.2	0.9	1.2	0.9	1.2	0.9

R1...R4 Figures H

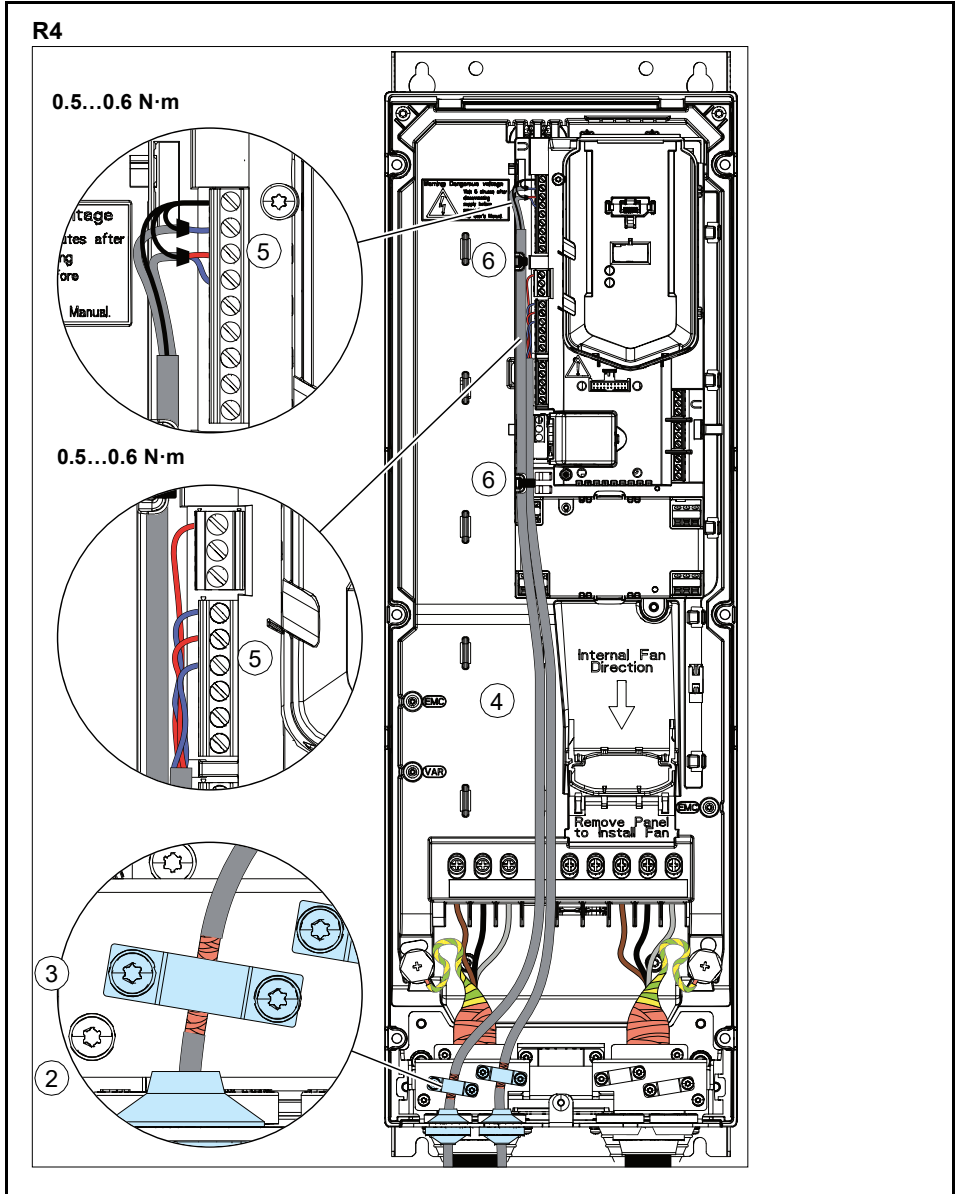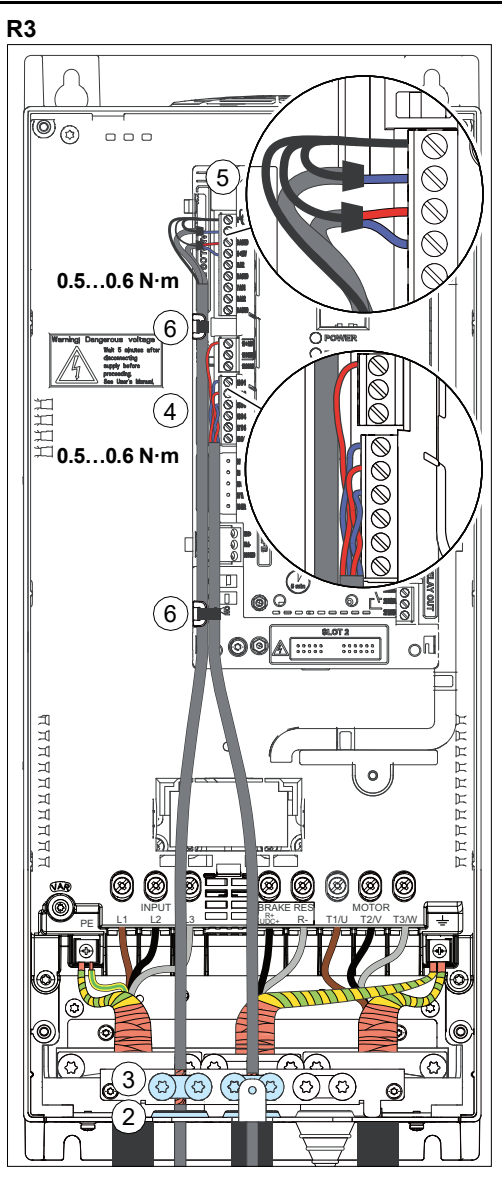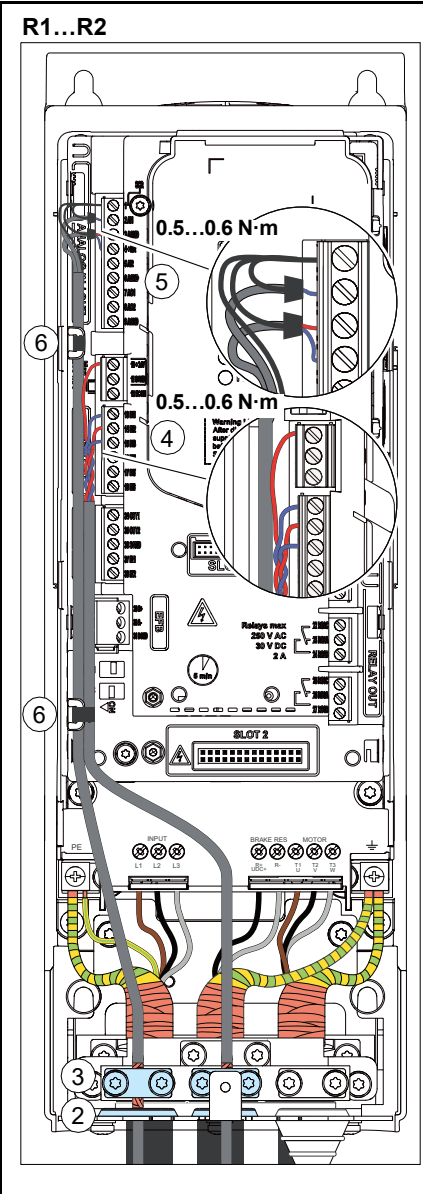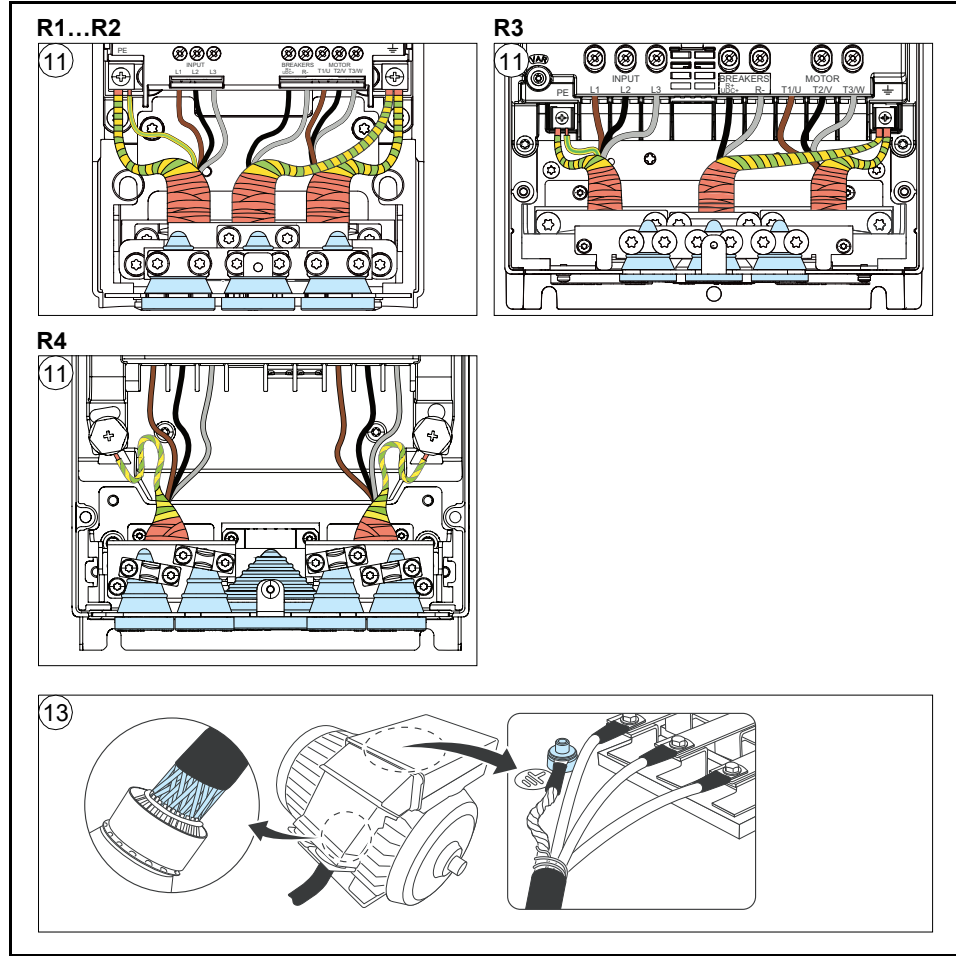









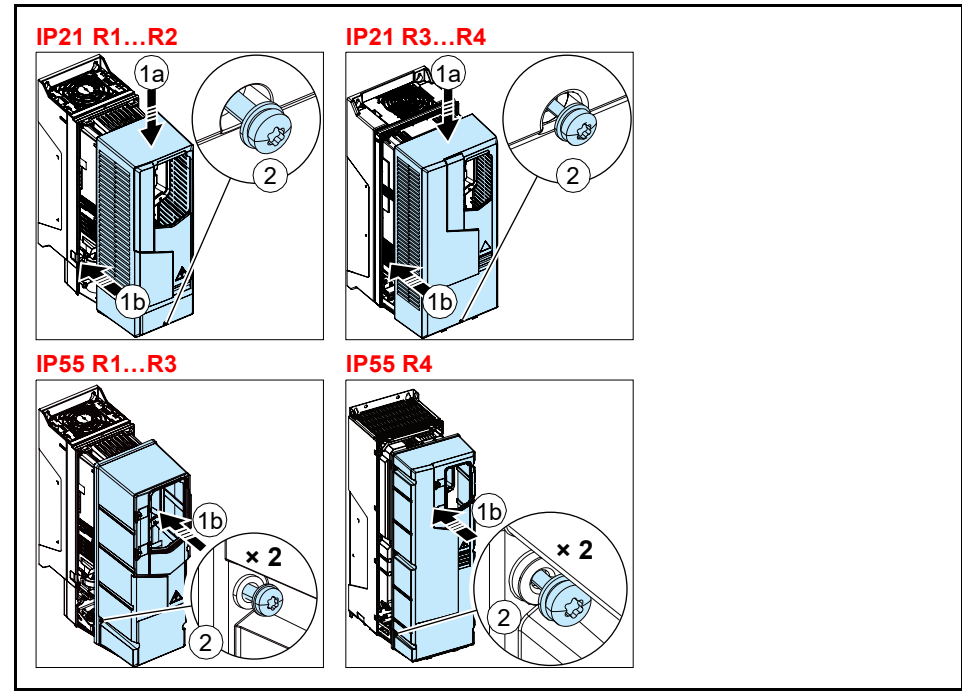


R5 Figures A




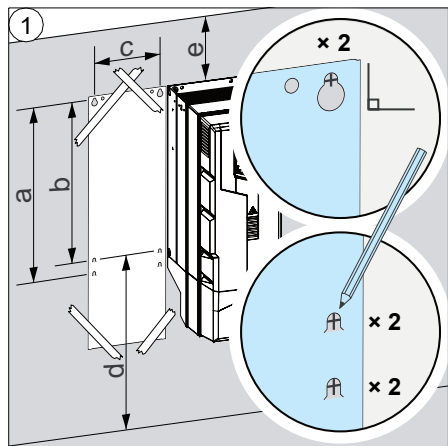


	R5 IP21		R5 IP55	
	mm	in	mm	in
a	612	24.09	612	24.09
b	581	22.87	581	22.87
c	160	6.30	160	6.30
d >	200	7.87	200	7.87
e >	100	3.94	100	3.94


⚠	R5 IP21		R5 IP55	
	kg	lb	kg	lb
	28.3	62.4	29.0	64.0

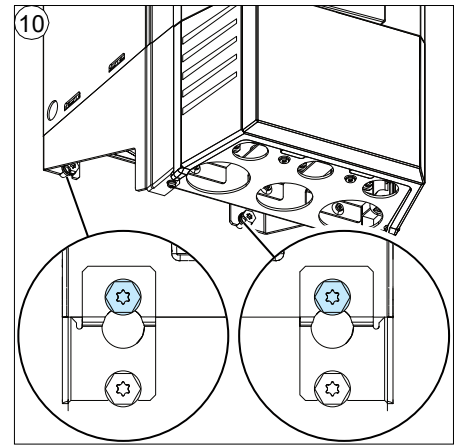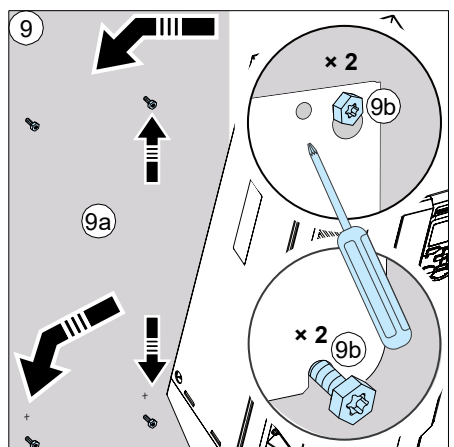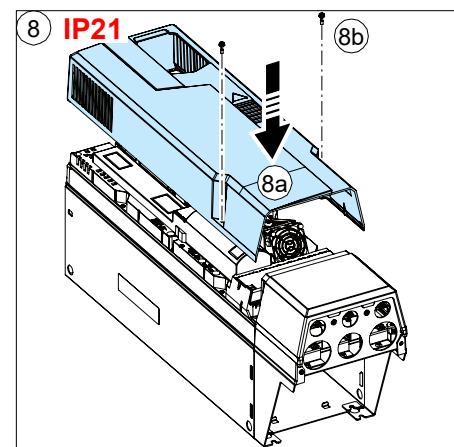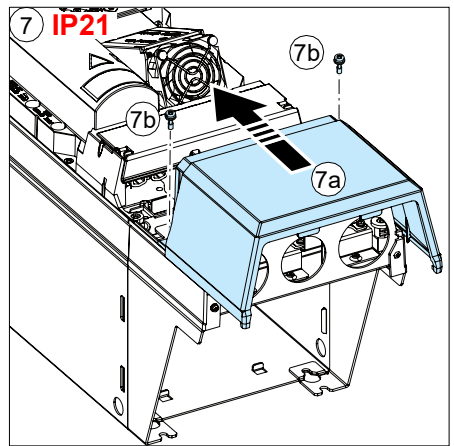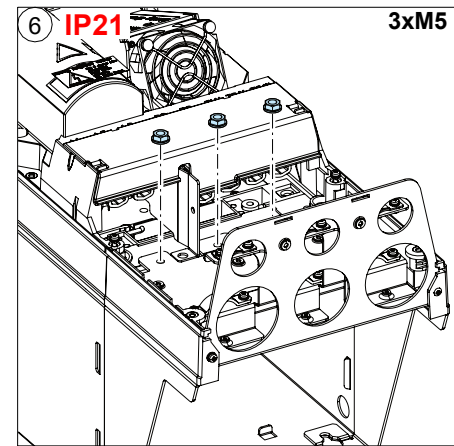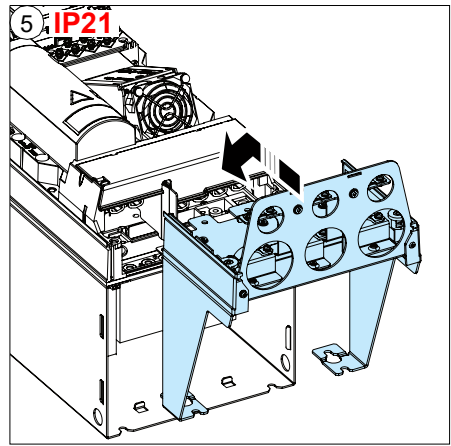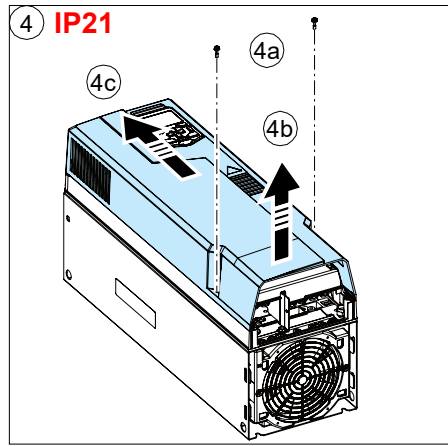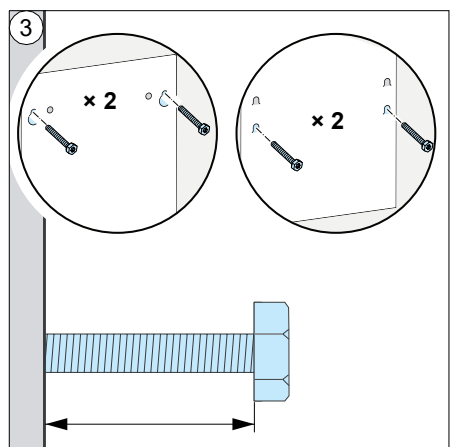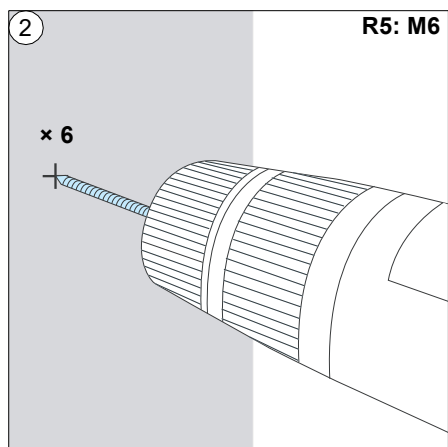

B

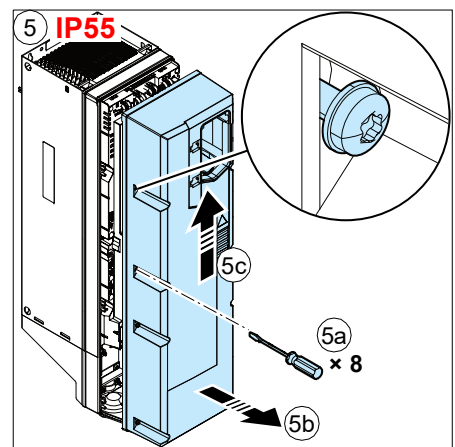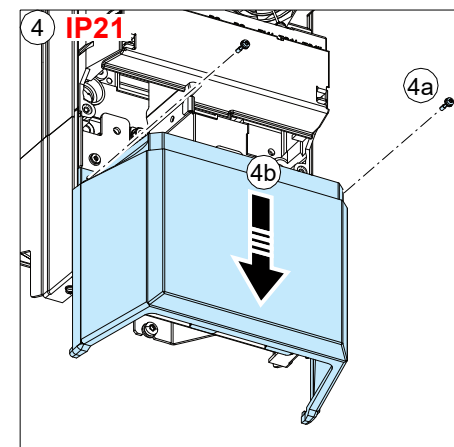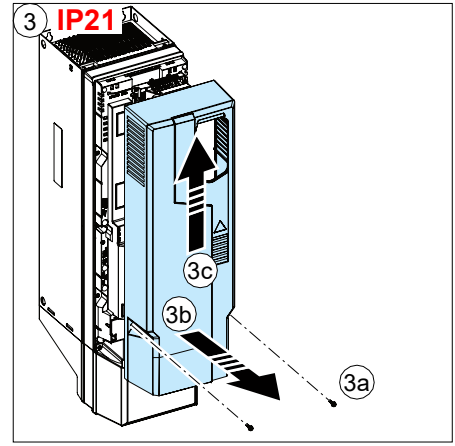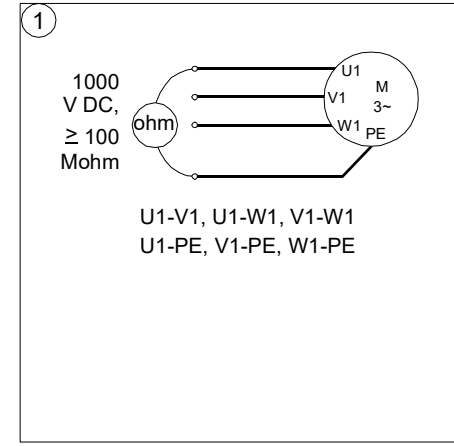


SYMMETRICALLY GROUNDED TN SYSTEMS (TN-S) = CENTER-GROUNDED WYE

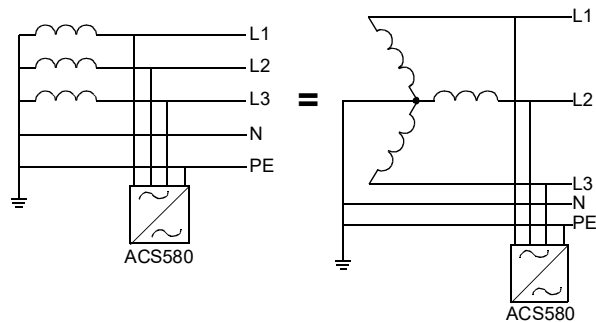


✓ OK

IT (UNGROUNDED), CORNER-GROUNDED DELTA, MIDPOINT-ROUNDED DELTA AND TT SYSTEMS


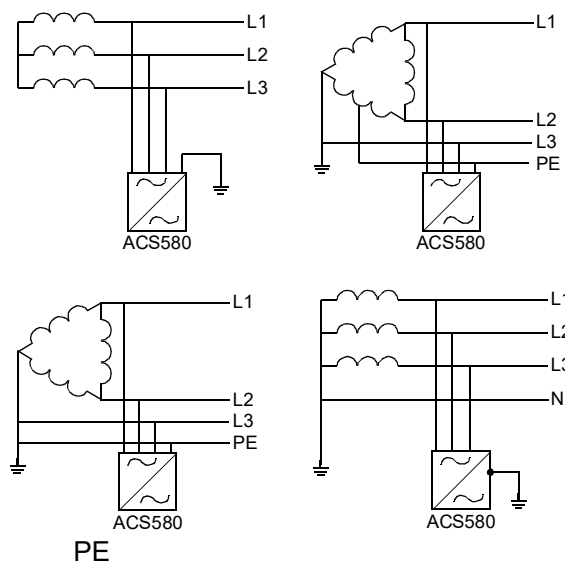


! ⚡



- EN: See page [33](#).
- DA: Se side [243](#).
- DE: Siehe Seite [109](#).
- ES: Véase la página [119](#).
- FI: Katso sivu [129](#).
- FR: Cf. page [139](#).
- IT: Vedere pag. [303](#).
- NL: Zie pagina [315](#).
- PL: Patrz str. [327](#).
- PT: Veja a página [339](#).
- RU: См. стр. [149](#).
- SV: Se sidan [159](#).
- TR: Bkz. sayfa [375](#).
- ZH: 请参阅第 [387](#)。

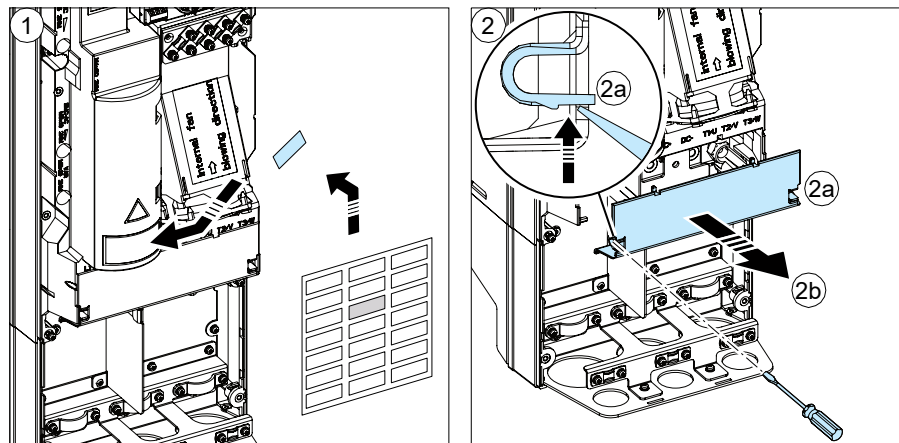




ACS580-01 R5

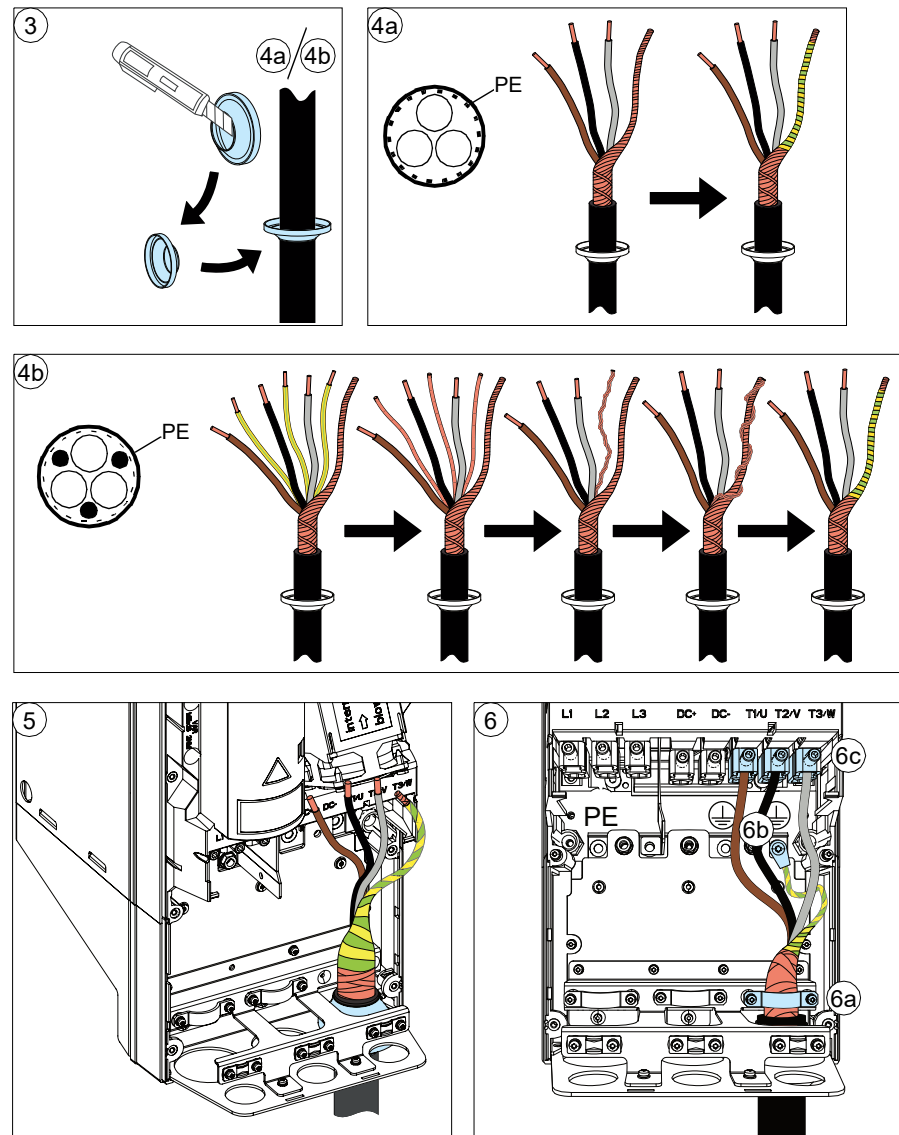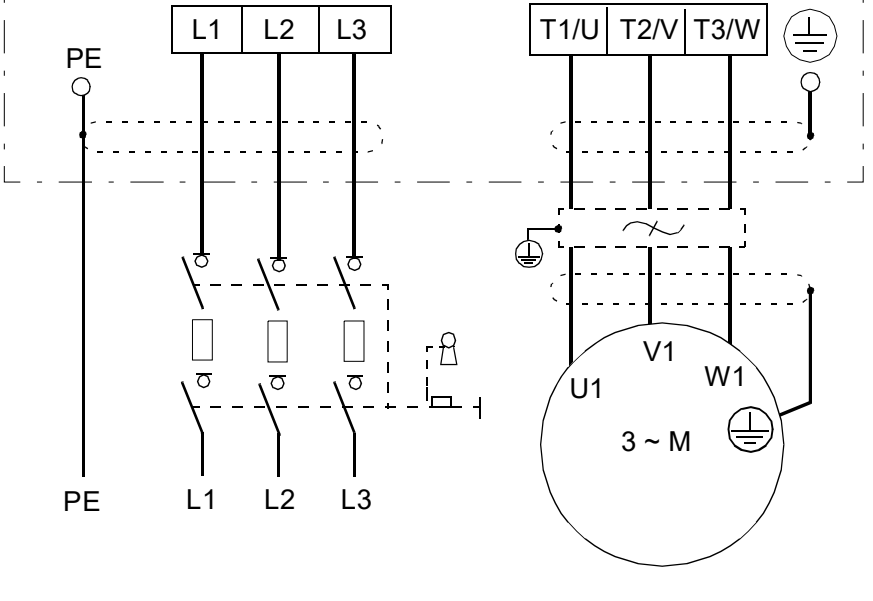


Frame size	T1/U, T2/V, T3/W		PE, ⊕			⊕ ⊖	
	N·m	lbf·ft	M	N·m	lbf·ft	N·m	lbf·ft
R5	5.6	4.1	M5	2.2	1,6	1.2	0.9

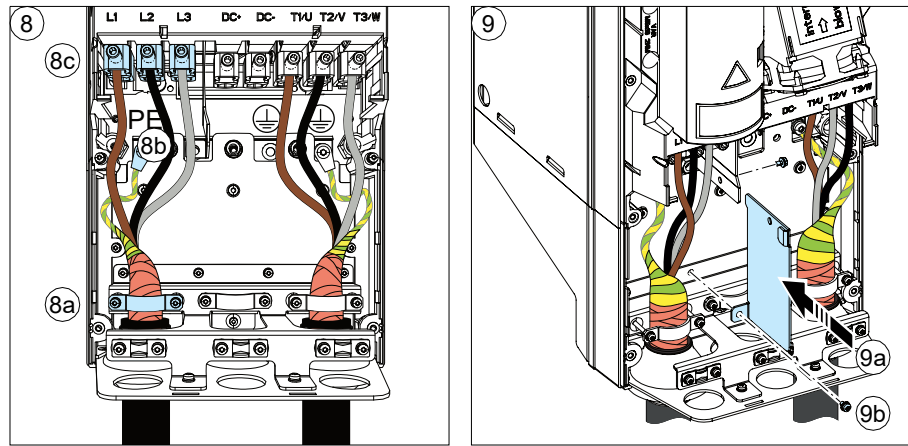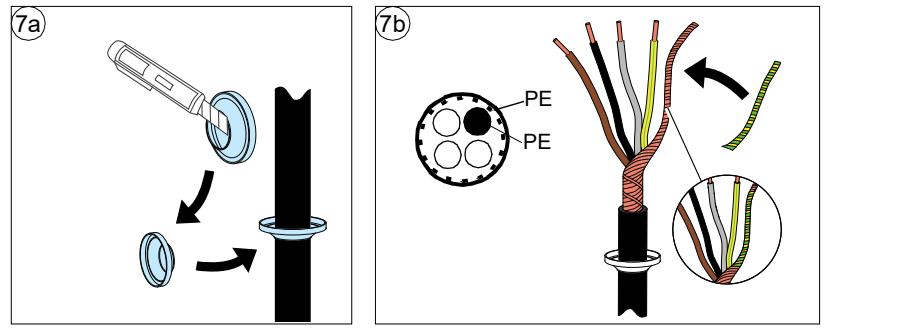

Frame size	L1, L2, L3,		PE, ⊕				
	N·m	lbf·ft	M	N·m	lbf·ft	N·m	lbf·ft
R5	5.6	4.1	M5	2.2	1,6	1.2	0.9

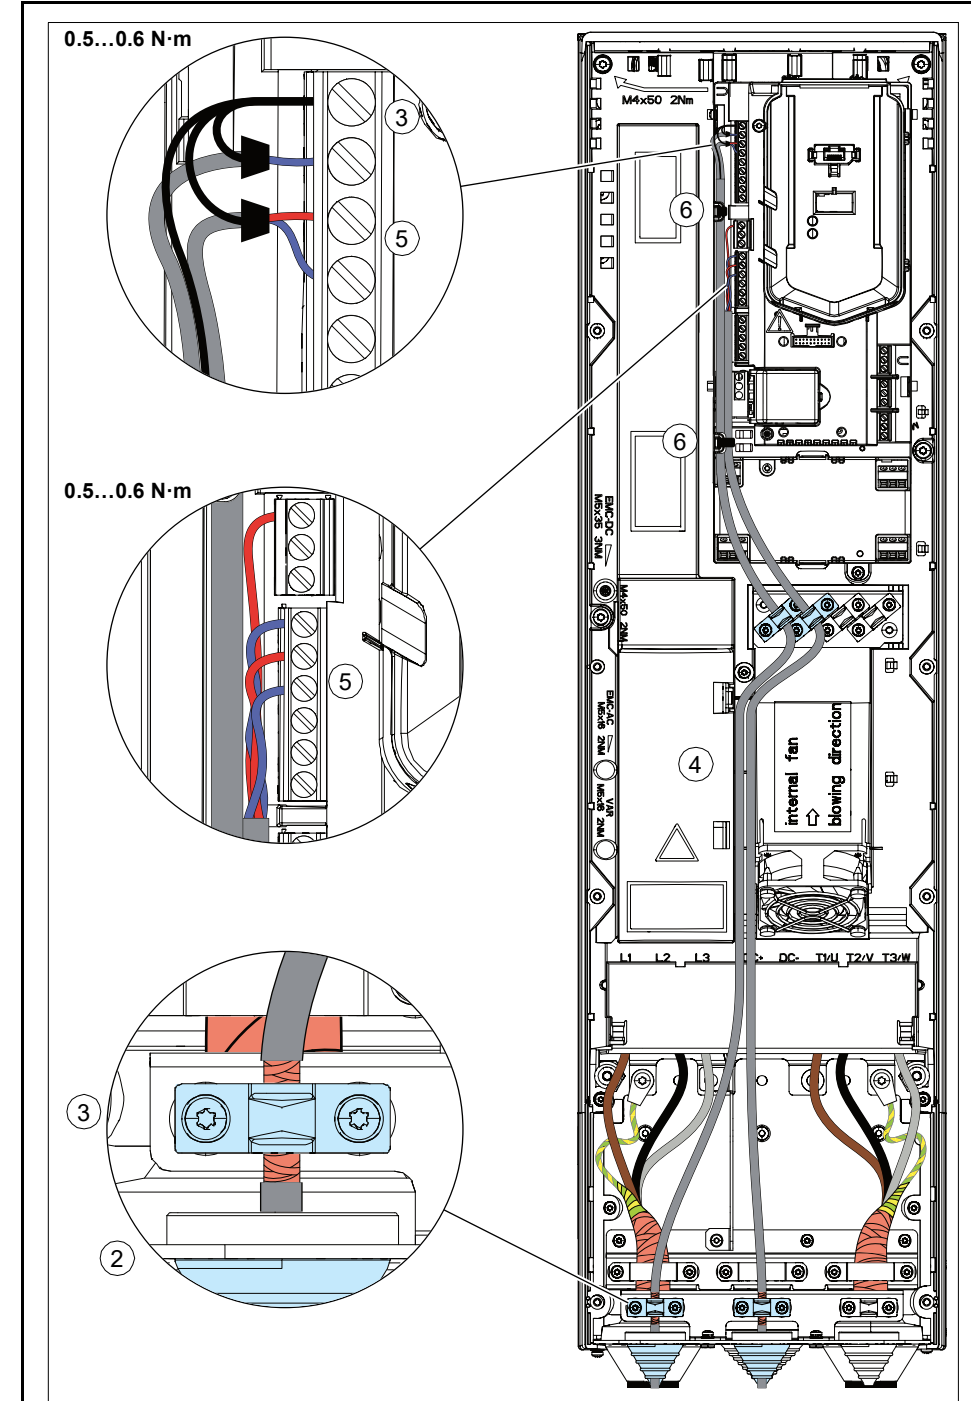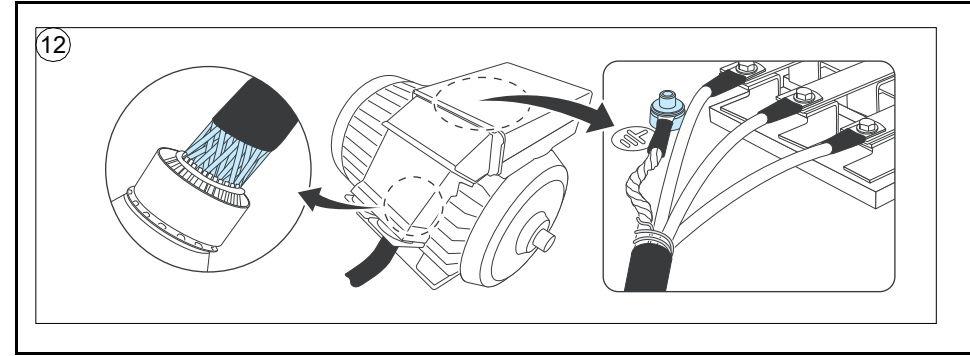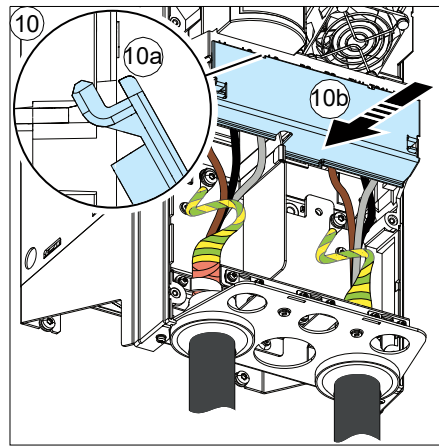

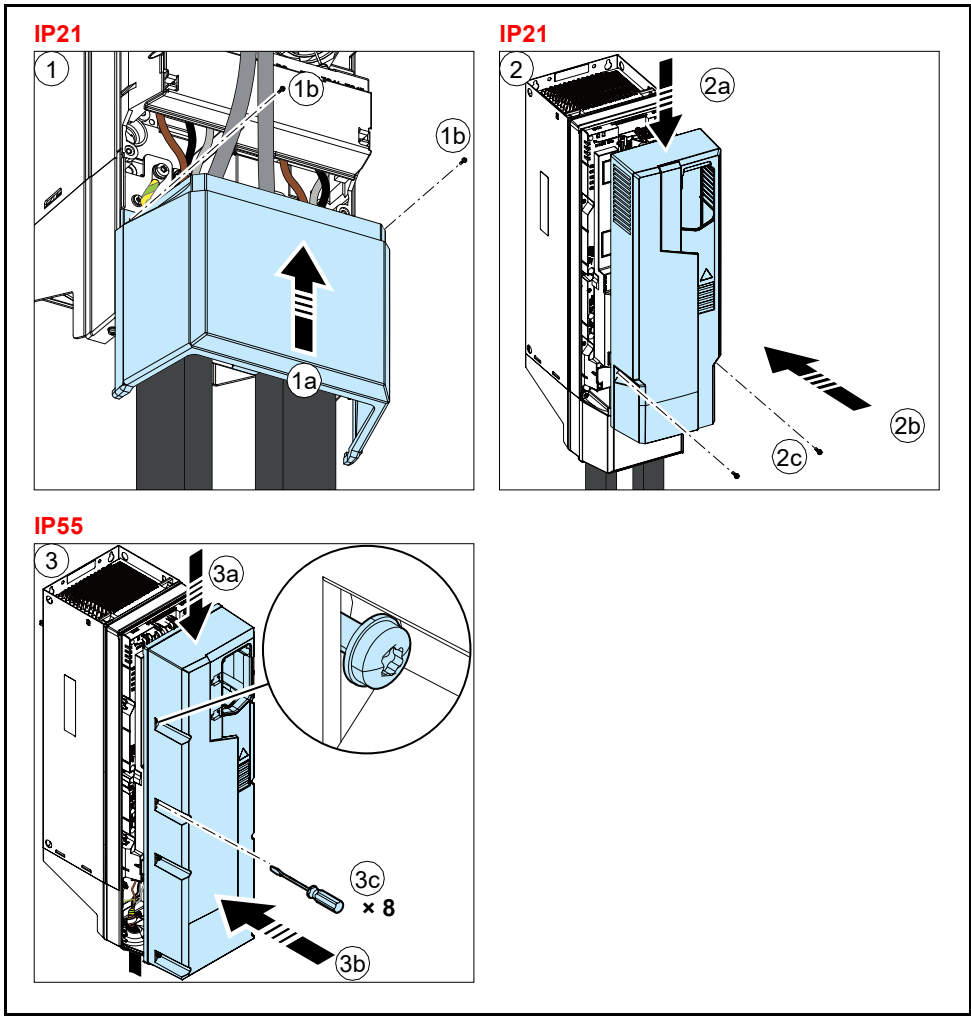

Further information

Product and service inquiries

Address any inquiries about the product to your local ABB representative, quoting the type designation and serial number of the unit in question. A listing of ABB sales, support and service contacts can be found by navigating to www.abb.com/searchchannels.

Product training

For information on ABB product training, navigate to new.abb.com/service/training.

Providing feedback on ABB Drives manuals

Your comments on our manuals are welcome. Navigate to new.abb.com/drives/manuals-feedback-form.

Document library on the Internet

You can find manuals and other product documents in PDF format on the Internet at www.abb.com/drives/documents.



abb.com/drives



3AXD50000044838D